


CONNECTION CASE 5000-CC HANDLING

Specifications

Structure	Housing type for the case(put into Single case or Multi case)
Outer dimension	Approx. 29.6(W)×120(H)×108(D)mm(projection excluding)

※The case applied : 570-SR,570-□□W, or 570-□□R

Outline Drawings

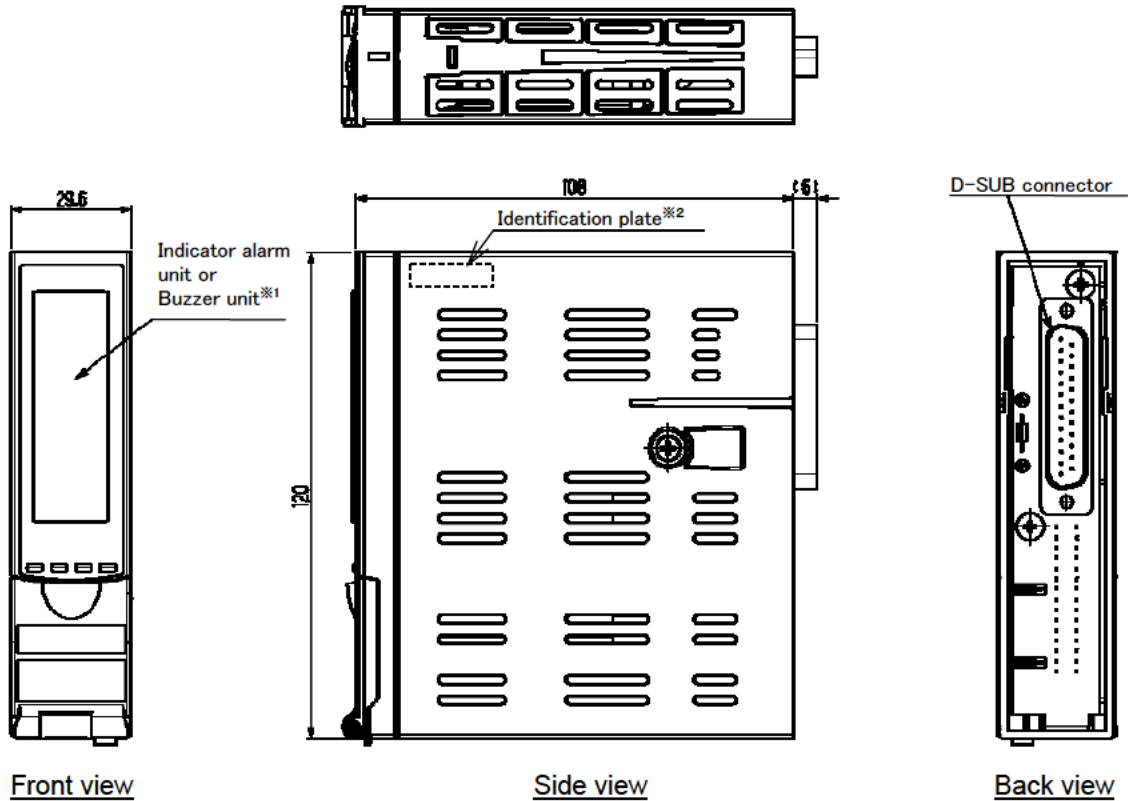

※1 Self-contained unit is optional accessory products.

※2 Identification plate : Applicable unit is displayed. Only the buzzer unit is stuck.
(printing character **TAN**)

Handling

- Connection case (5000-CC) is a compatible attachment unit when installing RM-5000 series indicator/alarm unit or buzzer unit into the case of existing model (RM-570A/RM-580).
- Installation method and input/out signal are compatible with the existing indicator/alarm unit and buzzer unit. Refer to the instruction manual of existing indicator/alarm unit for storage and wiring for the case.

CAUTION

- Do not rashly take off the jumper blocks (white plastic part) on the case nor change the settings. It can become the cause of incompatible.
- It can't be used in 570-TM among the existing series case. Refer to the applicable case on the specification.
- On the back, there are electrical parts such as jumpers and connectors etc. Do not apply excessive force or short circuit.
- Do not cover the slits of the case. Heat will be trapped and will become the cause of the failure.
- For others, refer to the instruction manual of RM-5000 series indicator/alarm unit and buzzer unit.