

Gas Detector with Signal Converter SD-3 Series

Operating Manual

RIKEN KEIKI Co., Ltd.

2-7-6 Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan

Phone : +81-3-3966-1113 Fax : +81-3-3558-9110 E-mail : intdept@rikenkeiki.co.jp

Web site: https://www.rikenkeiki.co.jp/english/

Contents

1.	Prod	duct Overview	4
	1-1	Introduction	4
	1-2	Intended use and features	6
		1-2-1 Models and Codes	6
		1-2-2 Detection principles and detection target gases for individual model	dels7
		1-2-3 Product features	8
	1-3	Usage zones and conditions	g
	1-4	DANGER, WARNING, and NOTE	10
	1-5	Method of confirmation for Standards and Explosion proof specification	10
2.	Impo	portant Safety Information	12
	2-1	Danger information	12
	2-2	Warning information	12
	2-3	Caution information	13
	2-4	Safety information	14
3.	Prod	duct Configuration	31
	3-1	Main unit and accessories	31
		3-1-1 Main unit (SD-3)	31
		3-1-2 Main unit (SD-3SC)	32
		3-1-3 Remote sensor head (GD-3)	32
		3-1-4 Standard accessories	33
		3-1-5 Optional accessories	34
	3-2	Part names and functions	38
	3-3	Block diagrams	39
4.	Insta	tallation	43
	4-1	Installation precautions	43
		4-1-1 General installation information	43
		4-1-2 Restrictions regarding installation	44
	4-2	System design precautions	49
		4-2-1 Using a stable power supply	49
		4-2-2 Lightning strike protective measures	49
	4-3	Providing maintenance space	50
	4-4	Main unit installation	52
		4-4-1 Vertical pole mounting	52
		4-4-2 Wall mounting	53
		4-4-3 Attaching protective cover	54
		4-4-4 Attaching sunshade cover	
	4-5	Remote sensor head (GD-3) installation	
		4-5-1 Wall mounting	
		4-5-2 Duct mounting	58
	4-6	Connecting the grounding terminal	60
	4-7	Connecting the power and signal cables	61
		4-7-1 Main unit cable and device connectors	
		4-7-2 Connecting the power and signal cables to the main unit	63
		4-7-3 Connecting the power and signal cables to the remote sensor head (0	
		4-7-4 Connecting the main unit (SD-3SC) and remote sensor head (Gl	•
		4-7-5 Connecting cables to the terminal plate	
	4-8		
	4-9		
	4-10		

	4-11 How to install the lightning arrester	83		
	4-12 RS-485 setting (optional)			
5.	Usage Instructions	87		
	5-1 Preparations for startup	87		
	5-2 Startup	88		
	5-3 Basic operation flow	89		
	5-4 Operating procedure	90		
	5-5 User mode	91		
	5-5-1 User mode setting items	91		
	5-5-2 Switching to user mode	92		
	5-6 Performing zero calibration	93		
	5-7 Checking settings	95		
	5-7-1 Checking alarm setpoints	95		
	5-7-2 Check RS-485 setting value	97		
	5-8 Shutting down	99		
6.	Storage, Relocation, and Disposal			
	6-1 Procedures for storage or when not in use for extended periods	100		
	6-2 Procedures for relocation or reuse	102		
	6-3 Product disposal	102		
7.	Troubleshooting	104		
	7-1 Product abnormalities	104		
	7-2 Reading abnormalities	105		
8.	Product Specifications	107		
	8-1 Detection target gases for individual detection principles	107		
	8-1-1 Non-dispersive infrared absorption type (Infrared type)	107		
	8-1-2 New ceramic type (catalytic type)	109		
	8-1-3 Semiconductor type	110		
	8-1-4 Hot-wire semiconductor type	112		
	8-1-5 Electrochemical type	114		
	Product warranty	115		
	Sensor warranty	115		
	Povicion History	116		

1. Product Overview 1-1 Introduction

1

Product Overview

1-1 Introduction

Thank you for purchasing the SD-3 Gas Detector with Signal Converter ("product" hereinafter).

This operating manual describes the outline, installation, and operation of this product. It provides information essential to correct use of the product.

Make sure you have read and fully understood the contents of this manual before using the product.

Keep this operating manual on hand to allow ready reference during use.

For more information on product maintenance and setting changes, refer to the Technical Manual available for download from our website.

The contents of this manual are subject to change without notice to allow product improvements. Any duplication or reproduction of this manual without permission is prohibited, whether in whole or in part.

RIKEN KEIKI accepts no liability for accidents or damage resulting from use of the product, whether within or outside the warranty period.

Be sure to read the warranty policy at the end of this document.

Before using the product, please confirm that the model of the product you purchased matches the model of the product covered by this operating manual.

<Models covered by this operating manual>

	Diffusion type	Suction type
	SD-3RI	SD-3DRI
	SD-3NC	SD-3DNC
	SD-3GH	SD-3DGH
Main unit	SD-3GHS	SD-3DGHS
IVIAIII UIIIL	SD-3SP	SD-3DSP
	SD-3EC	SD-3DEC
	SD-3ECS	SD-3DECS
	SD-3ECB	SD-3DECB
Main unit	SD-3SC	
	GD-3RI	
	GD-3NC	
	GD-3GH	
Remote	GD-3GHS	
sensor head	GD-3SP	
	GD-3EC	
	GD-3ECS	
	GD-3ECB	

1. Product Overview 1-1 Introduction

<This operating manual>

In this operating manual, where descriptions differ according to the detection principle, these are indicated by the following icons:

Non-dispersive infrared absorption type (infrared type)	RI
New ceramic type	NC
Semiconductor type	GH
Hot-wire semiconductor type	SP
Electrochemical type	EC

Operating procedures and specifications for which no icons appear apply to all detection principles. The display examples provided in this operating manual apply when the detection target gas is combustible (display units: %LEL).

1-2 Intended use and features

The product is a fixed explosion-proof device for continuous monitoring of combustible gases, toxic gases, and oxygen in the air.

An alarm is triggered if combustible gases, toxic gases, or oxygen exceeding preset concentrations are detected in the air.

The detection results are not intended to assure life or safety.

1-2-1 Models and Codes

SD-3 <u>1</u> <u>2</u> (<u>3</u> <u>4</u> <u>5</u> <u>6</u> <u>7</u> <u>8</u>)

[Remote type: Main unit (SD-3SC) + Remote sensor unit (GD-3)]

SD-3SC (<u>3</u> <u>4</u> <u>5</u> <u>6</u> <u>7</u> <u>8</u>)


GD-3 2

1	Diffusion type/suction type selection		
	Blank	Diffusion type	
	D	Suction type (introduced via external unit)	
2	Sensor	type selection	
	RI	Infrared type	
	NC	New ceramic type (catalytic type)	
	GH	Semiconductor type	
	GHS	Semiconductor type (for CS ₂)	
	SP	Hot-wire semiconductor type	
	EC	Electrochemical type (for CO/O ₂)	
	ECS	Electrochemical type (for H ₂ S)	
	ECB	Electrochemical type (other than	
	LOD	CO/O ₂ /H ₂ S)	
3	Cable of	connectors	
	0	Connector 1 + Connector 2	
	1	Connector 1 + Connector 2+ Connector	
		4 + Connector 5	
4	Explosi	on-proof	
	1	ATEX/IECEx	
	2	FM (US)	
	3	Japan Ex	
	4	cFM (CANADA)	
	5	_	
6		Taiwan Ex	
7 China Ex		China Ex	
5	Functional safety IEC61508*1		
	0	None	
	1	SIL (for RI/NC/EC/ECS/ECB)	

6	Performance certification				
	0	0 None			
	1	EN			
	2	US/CANADA			
	3	IEC			
	4	JIS			
7	Range	e setting*2			
0 Single range					
	1	Double range +4-16 (for NC)			
	2	Double range + L4-20 (for NC)			
	3	Double range + H4-20 (for NC)			
8	Outpu	Output type selection			
	0 4-20 mA + HART				
	1 4-20 mA + HART + contact (3c)				
2 4-20mA + RS-485					

*1 Double range is not supported in the SIL specification.
*2 HART communication is unavailable when double range

*2 HART communication is unavailable when double i (optional) is selected.

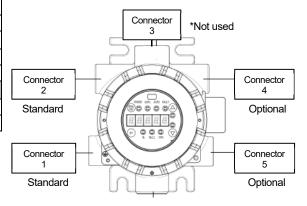

Example: Cable connectors

1-2-2 Detection principles and detection target gases for individual models

The product is available in the following models, depending on the specific detection method and detection principle.

Check the specifications before use to confirm that correct gases will be detected in accordance with the intended purpose.

<List of detection target gases by model>

Main unit	Detection		Detec	tion targ	et gas		
model	method	Detection principle	Combus- tible gas	Toxic gas	Oxygen	Remarks	
SD-3RI		Non-dispersive infrared absorption type (infrared type)	0	0			
SD-3NC		New ceramic type	0				
SD-3GH		Semiconductor type	0	0			
SD-3GHS	Diffusion	Semiconductor type		0		CS ₂ (carbon disulfide) only	
SD-3SP	Dilluoion	Hot-wire semiconductor type	0	0			
SD-3EC		Electrochemical type		0	0		
SD-3ECS		Electrochemical type		0		H ₂ S (hydrogen sulfide) only	
SD-3ECB		Electrochemical type		0		With EC barrier*	
SD-3DRI		Non-dispersive infrared absorption type (infrared type)	0	0			
SD-3DNC		New ceramic type	0				
SD-3DGH		Semiconductor type	0	0			
SD-3DGHS	Suction	Semiconductor type		0		CS ₂ (carbon disulfide) only	
SD-3DSP	Guction	Hot-wire semiconductor type	0	0			
SD-3DEC		Electrochemical type		0	0		
SD-3DECS		Electrochemical type		0		H ₂ S (hydrogen sulfide) only	
SD-3DECB		Electrochemical type		0		With EC barrier*	

^{*}Differs depending on detection target gas.

<List of detection target gases by model (remote sensor type)>

Main unit model SD-3SC

Remote	Detection		Combustible gas		et gas	Remarks	
sensor head model	Detection method	Detection principle			Oxygen		
GD-3RI		Non-dispersive infrared absorption type (infrared type)	0	0			
GD-3NC		New ceramic type	0				
GD-3GH		Semiconductor type	0	0			
GD-3GHS	Diffusion	Semiconductor type		0		CS ₂ (carbon disulfide) only	
GD-3SP		Hot-wire semiconductor type	0	0			
GD-3EC		Electrochemical type		0	0		
GD-3ECS		Electrochemical type		0		H ₂ S (hydrogen sulfide) only	
GD-3ECB		Electrochemical type		0		With EC barrier*	

^{*}Differs depending on detection target gas.

<Sensor models and detection principles>

Sensor model	Detection principle
IRF	Infrared type
NCF New ceramic type	
SGF	Semiconductor type
SHF	Hot-wire semiconductor type
ESF	Electrochemical type

1-2-3 Product features

<Standard specifications>

- The product is constructed with a stainless steel housing suitable for both indoors and outdoors use.
- Requires a 24 V DC (DC 18 V to 30 V) power supply.
- The gas concentration, status, and command selection menu are displayed using seven-segment LEDs.
- The concentration of the gas detected is converted to a 4 20 mA analog output (NAMUR NE43 compliant) or a digital output signal (HART output signal or RS-485) to output.
- It can be connected to a RIKEN KEIKI monitoring system or programmable logic controller (PLC) via a ceiling fitting or approved cable gland.

<Optional specifications>

• The product can be operated as a standalone unit by setting an alarm relay. Using the product as a standalone unit allows control of devices without the need for a central controller.*1

^{*1:} Using the product as a standalone unit requires additional alarm signal settings.

1-3 Usage zones and conditions

The product is approved for use in areas where gases classified in explosive gas groups IIA, IIB, or IIC may be present. This refers to use limited to hazardous zones categorized as Zone 1 or Zone 2 within the product operating temperature range.

1-4 DANGER, WARNING, and NOTE

This operating manual uses the following categories to indicate potential damage/hazards if the user disregards the information provided and uses the product incorrectly:


DANGER	This indicates situations in which improper handling may result in fatal or serious injury or significant property damage.
WARNING	This indicates situations in which improper handling may result in serious injury or significant property damage.
CAUTION	This indicates situations in which improper handling may result in minor injury or minor property damage.

Additionally, usage recommendations are indicated as follows:


NOTE	This indicates items that will be helpful to know when using the product.	
NOTE	This indicates terms that will be helpful to know when using the product.	ı

1-5 Method of confirmation for Standards and Explosion proof specification

This instrument has some specification depends on standard and explosion proof certificate. Please confirm the detector specification before using. Please refer Declaration of Conformity that is at the end of this manual if you have CE marking type. You can confirm instrument specification to see name plate as follows.

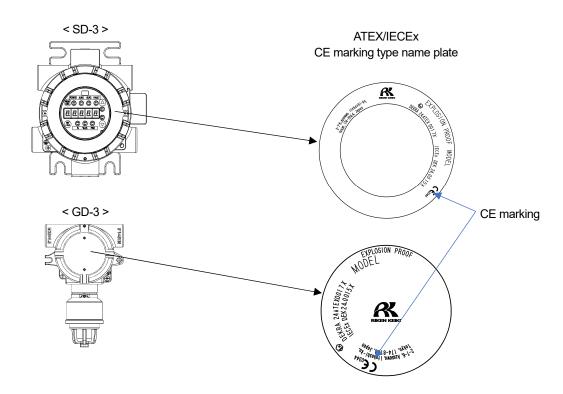

Taiwan Ex(TS) specification name plate

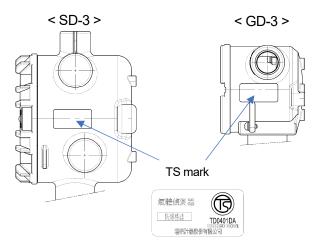

2

Important Safety Information

2-1 Danger information



- Do not open the cover while the power is turned on. When opening the cover, use a portable gas
 detector or other similar device to confirm that there is no gas present in the vicinity.
- Do not attempt to repair the product.
- Do not attempt to repair or replace the explosion-proof bonding surface. If you observe scratches, cracks, or deformation on the housing or explosion-proof bonding surface, stop using the product immediately and contact RIKEN KEIKI promptly.

2-2 Warning information



- Before turning on the power for the product, be sure to confirm that the power source meets the specified voltage requirements.
 - Using power supplies other than the stipulated voltage will damage the product. Do not use unstable power supplies. Doing so may result in malfunctions.
- Do not disconnect the protective grounding wire or terminal.
- Before operating the product, check the protective functions for defects.
 Do not operate the product if you suspect any problems with the protective grounding or other protective functions.
- Connect to a protective ground before connecting to external control circuits.
- Before adjusting zero for the surrounding atmosphere, confirm that the surrounding atmosphere contains clean air.
 - The presence of interference gases will prevent proper air calibration. The presence of miscellaneous gases is also extremely dangerous because the product may not detect actual gas leaks correctly.
- A gas alarm indicates the presence of extreme danger. The user must take appropriate action after taking suitable steps to ensure safety.
- Do not immerse the product in organic solvents for extended periods. The flame arrester components are made of polyphenylene sulfide (PPS) resin.

2-3 Caution information



- The product operation may be affected by radio waves emitted from walkie-talkies or other radio transmitters used near the product or its cables. Position walkie-talkies or other similar devices so that they do not affect the product operation.
- Wait at least 10 seconds before turning the power back on again after turning off. The product may not function correctly if the power is turned back on immediately.
- The product is not a control device. Never use the product output to control other devices.
- Do not disassemble or alter the product. Product performance cannot be guaranteed if the product is disassembled or modified.
- Do not alter settings unnecessarily unless you are fully aware of the consequences. Doing so may result in improper alarm function. Avoid performing any operations not described in this operating manual.
- The product is a safety device. Be sure to maintain the product at regular intervals to ensure safety. Continuing to use the product without adequate maintenance will result in sensor sensitivity degradation and prevent proper gas detection.

2-4 Safety information

<Product overview>

- The products have an explosion-proof construction.
- Sensors are divided into three different types, depending on the corresponding detection principles. The
 detection methods are divided into the diffusion type and suction type. Suction-type sensors should be used
 with a suction cap fitted.
- The product is a fixed, continuous monitoring detector. It can be connected to a gas monitoring control unit, recorder, or programmable control unit to output the measured gas readings as a 4 - 20 mA signal or HART signal.
- · The following three sets of output specifications are available for this product:
 - · No alarm relay, no digital communication
 - 3 alarm relays (contact output) (alarm relays operate in conjunction with gas alarms and faults), no digital signal
 - No alarm relay, digital communication (RS-485 output)
- The electrochemical sensor is made into an explosion-proof construction by using an EC barrier.

<Detection principles and models>

• The models corresponding to the individual detection principles are as follows. The models are classified by detection principle and detection method.

Detection principle	Model	
Optical sensor Non-dispersive infrared absorption type (infrared type)		SD-3RI
Solid state sensor	Semiconductor type	SD-3GH
		SD-3GHS
	New ceramic type (catalytic type)	SD-3NC
	Hot-wire semiconductor type	SD-3SP
Electrochemical sensor	Electrochemical type	SD-3EC
		SD-3ECS
		SD-3ECB

Detection principle	e (Detection method: Suction type)	Model
Optical sensor	Non-dispersive infrared absorption type (infrared type)	SD-3DRI
Solid state sensor	Semiconductor type	SD-3DGH
		SD-3DGHS
	New ceramic type	SD-3DNC
	Hot-wire semiconductor type	SD-3DSP
Electrochemical sensor	Electrochemical type	SD-3DEC
		SD-3DECS
		SD-3DECB

• The SD-3SC is used with a remote sensor head (GD-3) from among the following models:

		Model	
Detection principle	(Detection method: Diffusion type)	GD-3 (Remote sensor head)	SD-3
Optical sensor	Non-dispersive infrared absorption type (infrared type)	GD-3RI	
Solid state sensor	Semiconductor type	GD-3GH	1
		GD-3GHS	1
	New ceramic type	GD-3NC	SD-3SC
	Hot-wire semiconductor type	GD-3SP]
Electrochemical sensor	Electrochemical type	GD-3EC	1
		GD-3ECS	
		GD-3ECB	



- The SD-3EC and GD-3EC models are subdivided by the type of explosion-proof construction of the flame arrester fitted to the sensor and whether they include an EC barrier.
 - The expected explosion-proof performance cannot be ensured if the incorrect flame arrestor is used. Do not replace with a different flame arrester.
- The SD-3GH and GD-3GH models are subdivided by the type of explosion-proof construction of the flame arrester fitted to the sensor.
 - The expected explosion-proof performance cannot be ensured if the incorrect flame arrestor is used. Do not replace with a different flame arrester.

<Explosion-proof performance data>

The range of ambient temperatures in which explosion-proof performance can be maintained will differ depending on whether the optional lightning arrester is fitted.

Refer to the following performance data for each model:

<Without lightning arrester>

Model	Explosion- proof construction	Group	Category	Explosion-proof class	EPL	Ambient temperature*1
SD-3RI				E 11 110 TO		50 00 1T 1:00 00
SD-3DRI	d	II	2 G	Ex db IIC T6 Ex db IIC T5	Gb	-50 °C ≤ Ta ≤ +60 °C -50 °C ≤ Ta ≤ +70 °C
GD-3RI				EX do no 15		-50 0 2 14 2 170 0
SD-3GH				E II. IIO TE		F0 90 4 T 4 4 4 4 90
SD-3DGH	d	II	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +44 °C -50 °C ≤ Ta ≤ +70 °C
GD-3GH				EX GO HO 14		00 0 1 10 1 170 0
SD-3GHS				F II. II.O TO		F0 00 4 T 4 4 4 7 00
SD-3DGHS	d	II	2 G	Ex db IIC T6 Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +47 °C -50 °C ≤ Ta ≤ +70 °C
GD-3GHS				EX do 110 14		-50 0 2 14 2 170 0
SD-3NC				E		50.00 1T 1.11.00
SD-3DNC	d	II	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +44 °C -50 °C ≤ Ta ≤ +70 °C
GD-3NC				EX UD IIO 14		-50 0 2 18 2 170 0
SD-3SP				E 0 TE		50 00 1T 1 55 00
SD-3DSP	d	II	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +55 °C -50 °C ≤ Ta ≤ +70 °C
GD-3SP				EX do 110 14		-50 0 2 14 2 170 0
SD-3EC						
SD-3DEC	d	II	2 G	Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +70 °C
GD-3EC						
SD-3ECS						
SD-3DECS	d	II	2 G	Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +70 °C
GD-3ECS						
SD-3ECB						
SD-3DECB	d+i	II	2 G	Ex db ia IIC T4	Gb	-40 °C ≤ Ta ≤ +70 °C
GD-3ECB						
SD-3SC*2	d	II	2 G	Ex db IIC T6 Ex db IIC T5 Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +47 °C -50 °C ≤ Ta ≤ +55 °C -50 °C ≤ Ta ≤ +70 °C
SD-3SC*3	d	II	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-50 °C ≤ Ta ≤ +44 °C -50 °C ≤ Ta ≤ +70 °C
SD-3SC*4	d	II	2 G	Ex db IIC T6 Ex db IIC T5	Gb	-50 °C ≤ Ta ≤ +60 °C -50 °C ≤ Ta ≤ +70 °C
SD-3SC*5	d	II	2 G	Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +70 °C

^{*1:} The ambient temperature refers to temperatures in the range within which explosion-proof performance can be maintained. It does not imply the temperature range within which the required product performance may be achieved. For information on the operating temperature range, refer to '8-1 Detection target gases for individual deterction principles'.

^{*2:} When used in combination with GD-3GHS, GD-3SP, GD-3EC, and GD-3ECS

^{*3:} When used in combination with GD-3GH and GD-3NC

^{*4:} When used with the GD-3RI

^{*5:} When used in combination with GD-3ECB

<With lightning arrester>

With lightning Model	Explosion- proof construction	Group	Category	Explosion-proof class	EPL	Ambient temperature*1
SD-3RI						
SD-3DRI	d	II	2 G	Ex db IIC T6 Ex db IIC T5	Gb	-40 °C ≤ Ta ≤ +60 °C -40 °C ≤ Ta ≤ +70 °C
GD-3RI				EX db iio 15		-40 0 = 1a = 170 0
SD-3GH				E " "O TE		40.00 AT 4.44.00
SD-3DGH	d	II	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +44 °C -40 °C ≤ Ta ≤ +70°C
GD-3GH				EX GD 110 14		- 1 0 0 1 1 1 2 1 7 0 0
SD-3GHS				Ev de IIO TO		40 °C < T ₂ < ±47 °C
SD-3DGHS	d	П	2 G	Ex db IIC T6 Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +47 °C -40 °C ≤ Ta ≤ +70°C
GD-3GHS				EX GO IIO 14		40 02 142 170 0
SD-3NC				F., 45 110 TE		40 °C < T- < +44 °C
SD-3DNC	d	П	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +44 °C -40 °C ≤ Ta ≤ +70 °C
GD-3NC				EX GO IIO 14		40 0 1 14 1 7 0 0
SD-3SP				Ev de IIO TE		40 °C < To < 155 °C
SD-3DSP	d	II	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +55 °C -40 °C ≤ Ta ≤ +70 °C
GD-3SP				EX GO IIO 14		40 0 1 14 2 7 7 0 0
SD-3EC						
SD-3DEC	d	II	2 G	Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +70 °C
GD-3EC						
SD-3ECS						
SD-3DECS	d	II	2 G	Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +70 °C
GD-3ECS						
SD-3ECB						
SD-3DECB	d+i	Ш	2 G	Ex db ia IIC T4	Gb	-40 °C ≤ Ta ≤ +70 °C
GD-3ECB						
SD-3SC*2	d	II	2 G	Ex db IIC T6 Ex db IIC T5 Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +47 °C -40 °C ≤ Ta ≤ +55 °C -40 °C ≤ Ta ≤ +70 °C
SD-3SC*3	d	II	2 G	Ex db IIC T5 Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +44 °C -40 °C ≤ Ta ≤ +70 °C
SD-3SC*4	d	II	2 G	Ex db IIC T6 Ex db IIC T5	Gb	-40 °C ≤ Ta ≤ +60 °C -40 °C ≤ Ta ≤ +70 °C
SD-3SC*5	d	II	2 G	Ex db IIC T4	Gb	-40 °C ≤ Ta ≤ +70 °C

^{*1:} The ambient temperature refers to temperatures in the range within which explosion-proof performance can be maintained. It does not imply the temperature range within which the required product performance may be achieved. For information on the operating temperature range, refer to '8-1 Detection target gases for individual deterction principles'.

^{*2:} When used in combination with GD-3GHS, GD-3SP, GD-3EC, and GD-3ECS

^{*3:} When used in combination with GD-3GH and GD-3NC

^{*4:} When used with the GD-3RI

^{*5:} When used in combination with GD-3ECB

<Electrical data>

					Option (select one)		
Model	Supply voltage	Power consumption	Signal output	No alarm relay/ No digital communication	Alarm relay (contact output)/ Resistance load only	Digital communication	
SD-3RI	24 V DC	3.8 W Max	0 - 22 mA + HART	_	30 V DC, 1 A	RS-485 output	
SD-3DRI	(18 V - 30 V	J.O W WAX	0 - 22 IIIA 1 IIAKI		250 V AC, 2 A	NO-400 output	
GD-3RI	DC Max)	1.2 W Max	_	_	_	_	
SD-3GH	24 V DC	4.5 W Max	0 - 22 mA + HART		30 V DC, 1 A	RS-485 output	
SD-3DGH	(18 V - 30 V	4.5 W Wax	0 - 22 IIIA + HAINT	_	250 V AC, 2 A	NS-465 Output	
GD-3GH	DC Max)	2 W Max	_	_	_	_	
SD-3GHS	24 V DC	4.5 W Max	0 - 22 mA + HART	_	30 V DC, 1 A	RS-485 output	
SD-3DGHS	(18 V - 30 V	4.5 W Wax	0 - 22 111/4 / 11/4(1		250 V AC, 2 A	110-400 output	
GD-3GHS	DC Max)	2 W Max	_	_	_	_	
SD-3NC	24 V DC	4.5 W Max	0 - 22 mA + HART	_	30 V DC, 1 A	RS-485 output	
SD-3DNC	(18 V - 30 V	4.0 W Wax	0 22 117 (17 (())		250 V AC, 2 A	110 400 output	
GD-3NC	DC Max)	2 W Max	_	_	_	_	
SD-3SP	24 V DC	3.5 W Max	0 - 22 mA + HART	_	30 V DC, 1 A	RS-485 output	
SD-3DSP	(18 V - 30 V	(18 V - 30 V	0 22 110 (110 ()		250 V AC, 2 A	- 100 output	
GD-3SP	DC Max)	1 W Max	_	_	_	_	
SD-3EC	24 V DC	2.8 W Max	0 - 22 mA + HART	_	30 V DC, 1 A	RS-485 output	
SD-3DEC	(18 V - 30 V DC Max)				250 V AC, 2 A		
GD-3EC	DC Max)	1 W Max	_	_	_	_	
SD-3ECS	24 V DC	2.8 W Max	0 - 22 mA + HART	_	30 V DC, 1 A	RS-485 output	
SD-3DECS	(18 V - 30 V DC Max)	-			250 V AC, 2 A		
GD-3ECS	DC Max)	1 W Max	_	_	_	_	
SD-3ECB	24 V DC	3.1 W Max	0 - 22 mA + HART	_	30 V DC, 1 A	RS-485 output	
SD-3DECB	(18 V - 30 V DC Max)				250 V AC, 2 A		
GD-3ECB	,	1 W Max	_	_	_	_	
SD-3SC	24 V DC (18 V - 30 V DC Max)	5 W Max	0 - 22 mA + HART	_	30 V DC, 1 A 250 V AC, 2 A	RS-485 output	

<Certificate numbers>

- IECEx DEK 24.0015X
- DEKRA 24ATEX0017X
- * Specific conditions of "X"-mark:
 - The flameproof joints are not intended to be repaired.
 - The Equipment with glass window plate must only be placed in areas with low risk of mechanical danger (ref clause 26.4.2 in EN 60079-0).
 - The manufacturer's instructions provides guidance for the user to minimize the risk from electrostatic discharge. Maximum capacitance of 6 nF can occur.
 - If attached to a flameproof enclosure the surge protectors shall be provided with a high strength locking compound on the mounting thread.
 - Refer to manual for ambient temperature and T-class.

<Applicable standards>

- · IEC 60079-0:2017
- · IEC 60079-1:2014
- · IEC 60079-11:2011
- EN IEC 60079-0:2018
- · EN 60079-1:2014
- · EN 60079-11:2012

<Operating manual no.>

• PT2-287

<Instruments No. & DATE>

INST. No.: Serial number

DATE: YYMM

RIKEN KEIKI Co., Ltd.


2-7-6 Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan

Phone: +81-3-3966-1113
Fax: +81-3-3558-9110
Fmail: intdent@illonkei


Email: intdept@rikenkeiki.co.jp
Website: https://www.rikenkeiki.co.jp





<System configuration diagrams>

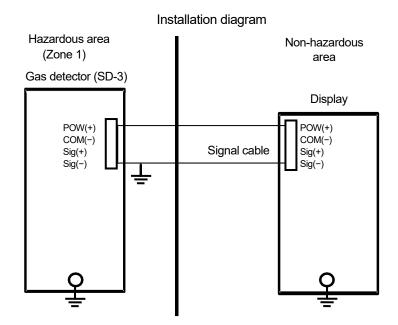



Installation diagram

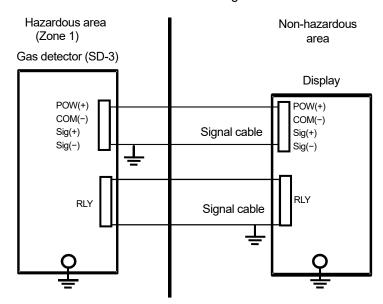

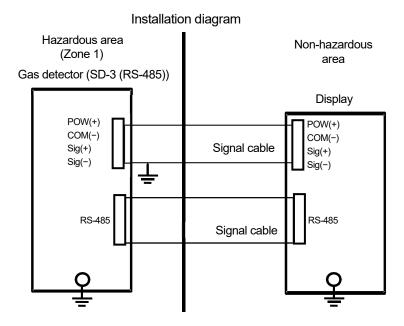

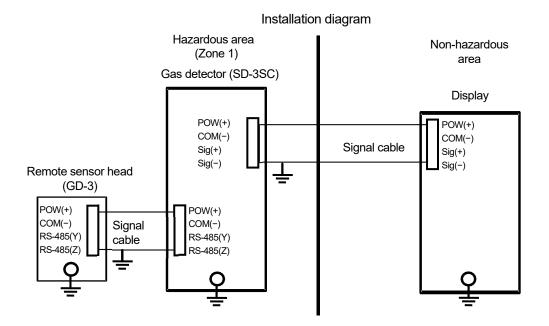

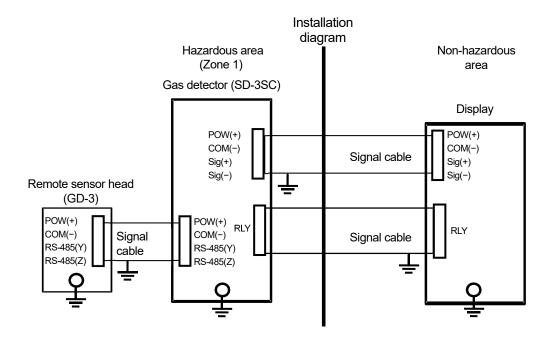

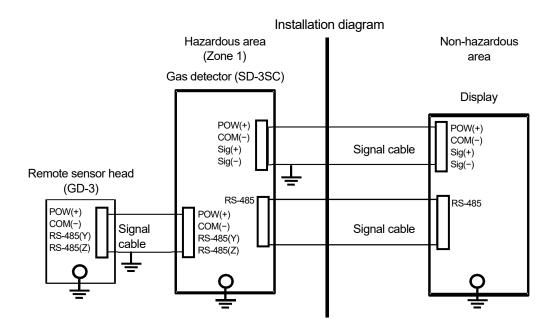




- Install the product in accordance with the required installation conditions.
- Do not disassemble, modify, or alter the product.
- Contact RIKEN KEIKI to request readjustment or parts replacement including calibration.
- Use cable lugs for grounding wire and bonding conductor connections. Make sure the bonding conductors are not loose or twisted.
- Do not open the cover in locations where explosive gas may be present.
- The maximum pressure inside the gas channels and sensor is 10.13 kPa (gauge pressure).
- Be sure to connect the grounding terminal before turning on the power to the product.
- Make sure the grounding is Class D equivalent (grounding resistance less than 100 Ω).
- Use crimped terminals to connect the grounding wire to the grounding terminal inside the unit. Use a cable with a cross section area of at least 4 mm² to connect to the external grounding terminal.
- Use approved cable glands when installing.
- If the product is installed in a location where the ambient temperature exceeds 65 °C, use cables designed for use at temperatures at least 5 °C above the maximum ambient temperature.
- Do not subject the window in the cover to strong forces or impact. Doing so may result in damage and impaired explosion-proof performance. (The low risk of mechanical hazards has been confirmed in testing [2 joules].)
- Do not use more than one adapter per connector.
- Do not replace the battery by the user.



With suction type

Use with a flow rate of at least 0.4 L/min and not exceeding 1.5 L/min.

<Connector screw thread types and sizes (SD-3/SD-3SC)>

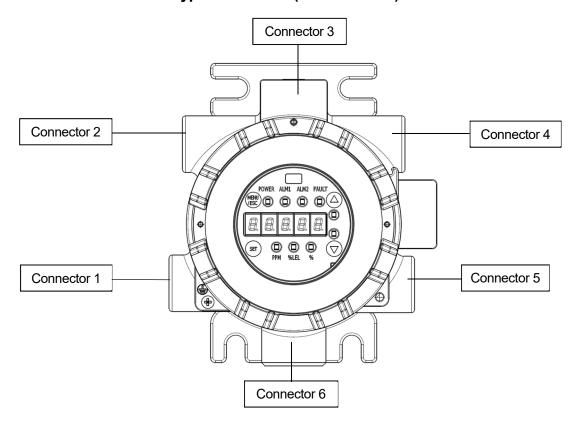

<Standard>

Connector 1	Connector 2	Connector 3	Connector 4	Connector 5	Connector 6
M25 × 1.5	M25 × 1.5	_	_	_	M25 × 1.5

- · "—" indicates no connector is available.
- Connectors 1, 2, and 6 can be used as cable entry ports. Use Connector 6 if the main unit (SD-3SC) is connected to the remote sensor head (GD-3) with a cable. Use approved cable glands when connecting the remote sensor head (GD-3).
- · Blank off unused connectors with blanking plugs.
- For more information on using individual connectors, refer to '4-7 Cable connection'.

<Optional>

Connectors 4 and 5 are available with optional screw threads, as follows:

Connector 1	Connector 2	Connector 3	Connector 4	Connector 5	Connector 6
M25 × 1.5	M25 × 1.5	_	M25 × 1.5	M25 × 1.5	M25 × 1.5

- "—" indicates no connector is available.
- Connectors 1, 2, 4, and 6 can be used as cable entry ports. Use Connector 6 if the main unit (SD-3SC) is connected to the remote sensor head (GD-3) with a cable. Use approved cable glands when connecting the remote sensor head (GD-3).
- Up to two external cable connectors can be used at the same time. (Excluding the remote sensor head (GD-3) connector cable)
- Connector 2 or 4 can be used to connect the optional lighting arrester using the optional adapter (to convert M25 × 1.5 screw thread to 1/2 NPT screw thread).
- Connector 5 is used for HART communication with an optional HART modem connector. Do not insert external cables or connect a lightning arrester. Blank off with a blanking plug if you do not use HART communication.
- · Blank off unused connectors with blanking plugs.
- For more information on using the individual connectors, refer to '4-7 Cable connection'.

<Components that can be connected (SD-3/SD-3SC)>

The following components can be connected to the main unit (SD-3/SD-3SC):

	Connector 1	Connector 2	Connector 3	Connector 4	Connector 5	Connector 6
Sensor assembly	×	×	×	×	×	0
EC barrier	×	×	×	×	×	0
Approved cable gland	0	0	×	0	×	0
M25 plug	0	0	×	0	0	×
Adapter (M25 ⇔ 1/2NPT)	0	0	×	0	×	0
Adapter (M25 ⇔ 3/4NPT)	0	0	×	0	×	0
Adapter (M25 ⇔ M20)	0	0	×	0	×	0
Lightning arrester	×	0	×	0	×	×

O: Can be connected

×: Cannot be connected

NOTE

- ► Connect only components that are compatible with the individual connectors on the main unit (SD-3/SD-3SC).
- ▶ Tighten M25 plugs and adapters to a torque of at least 30 Nm.
- ▶ Secure a minimum thread engagement of five threads.

<Lightning arrester details>


	Manufacturer	Eaton Electric Limited				
Part	Name/No.	TP48 or TP32 series surge protector				
T uit	Explosion-proof performance	II 2 G Ex db IIC T6 Gb				
	No. and issue	IECEx BAS 15.0056X Issue 1, Baseefa 04 ATEX 0053X				
Certification		EN 60079-0:2012+A11:2013				
Nos.	Applicable standards	EN 60079-1:2014				
1100.		IEC 60079-0:2011 Edition 6.0				
		IEC 60079-1:2014 Edition 7.0				
Rating	Voltage/current	48 V DC				
Rating	Temperature*	-40 - +70 °C				
Installation	Attachment screw	1/2NPT				

^{*}The minimum ambient temperature for the SD-3/GD-3 when using a surge protector is -40 °C.

The "X" at the end of the certificate number indicates the following special operating conditions:

Certificate numbers	"X" specific operating conditions	Judgment
	Use terminals suitable for the operating conditions or use appropriate termination within the bonds to protect against mechanical damage—for example, when pulling connector cables.	Conforms as assembly.
IECEx BAS 15.0056X Baseefa 04 ATEX 0053X	These devices are not equipped with grounding or external connectors to junction conductors. The user is responsible for attaching and ensuring adequate grounding.	Conforms as assembly.
Bassia CTATEA COCCA	This device is also provided as an "Ex i" version and features markings for both. The user is responsible for determining explosion-proof performance.	Not applicable
	When attaching to a flame-proof housing, apply high- strength thread-locking compound to the mounting screw on the surge protector.	"X" marking

<Components that can be connected (GD-3)>

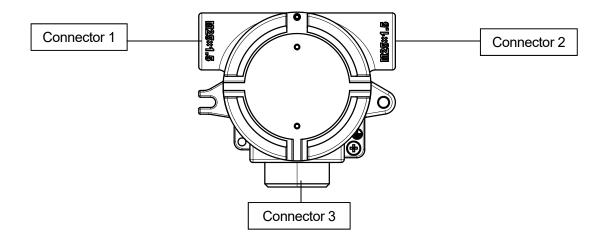

The following components can be connected to the remote sensor head (GD-3):

	Connector 1	Connector 2	Connector 3
Sensor assembly	×	×	0
EC barrier	×	×	0
Approved cable gland	0	0	×
M25 plug	0	0	0
Adapter (M25 ⇔ 1/2NPT)	0	0	0
Adapter (M25 ⇔ 3/4NPT)	0	0	0
Adapter (M25 ⇔ M20)	0	0	0


O: Can be connected


×: Cannot be connected

NOTE

- ► Connect only components that are compatible with the individual connectors on the remote sensor head (GD-3).
- ▶ Tighten M25 plugs and adapters to a torque of at least 30 Nm.
- Secure a minimum thread engagement of five threads.


<Connection examples>

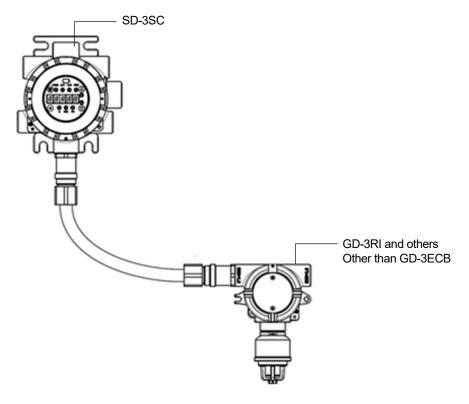

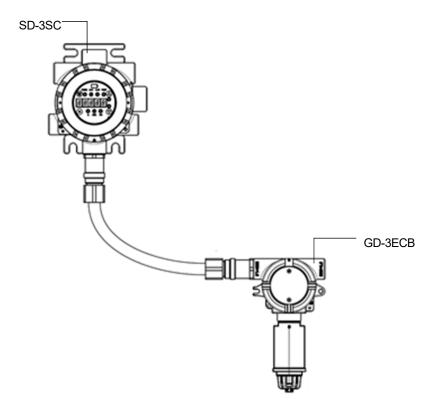


<Exploded view>

<SD-3>

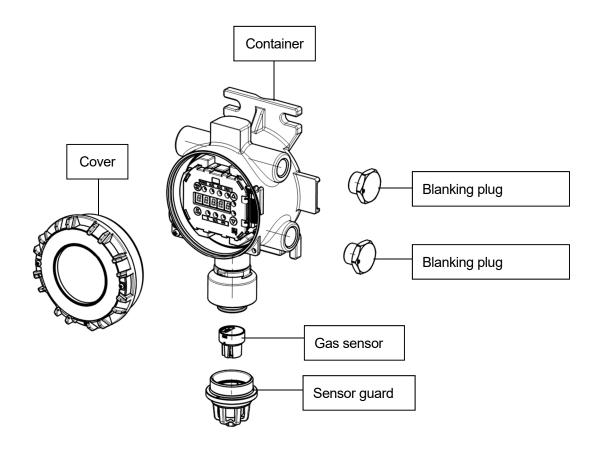

<GD-3>

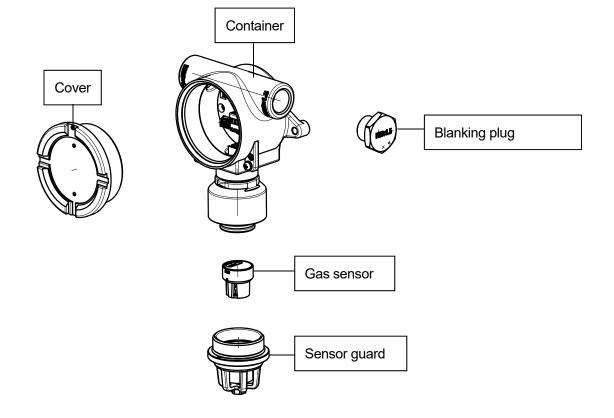


<Screw holes on rear of container (SD-3)>


Four screw holes are located on the rear of the main unit container.

- · Screw size: M5
- Pitch: 0.8
- · Screw depth: 5
- · Maximum allowable length of male screw:

Lmax = 4.2 mm + x

("x" is the intermediate part thickness.)

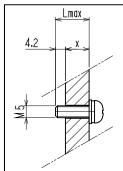

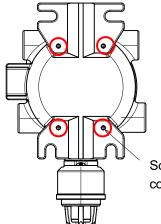

Screw holes on rear of container (four locations)


<Screw holes on rear and underside of container (GD-3)>

There are four screw holes on the rear of the container and four screw holes on the underside.

- · Screw size: M5
- Pitch: 0.8
- · Screw depth: 5
- · Maximum allowable length of male screw:


Lmax = 4.2 mm + x

("x" is the intermediate part thickness.)

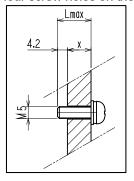


<Container rear>

Screw holes on rear of container (four locations)

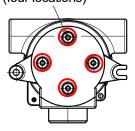

<Container underside>

 

Screw holes on underside of container (four locations)

3


Product Configuration


3-1 Main unit and accessories

Open the box and packaging and inspect the main unit and accessories. If anything is missing, contact RIKEN KEIKI.

3-1-1 Main unit (SD-3)


<Diffusion type>

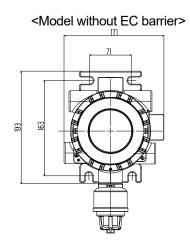

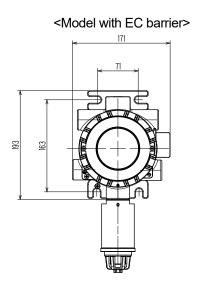


<Suction type>


<Model without EC barrier>

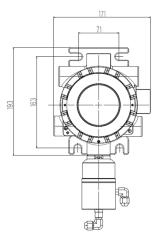

<Model with EC barrier>

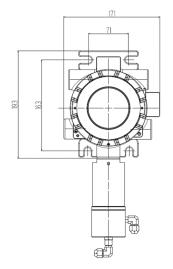


3-1-2 Main unit (SD-3SC)

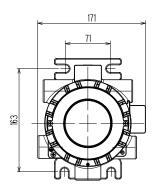


3-1-3 Remote sensor head (GD-3)

<Diffusion type>

<Model without EC barrier>

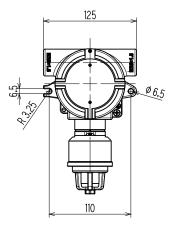

<Model with EC barrier>

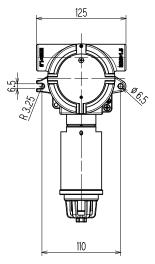

3-1-4 Standard accessories

Standard accessory		Quantity	Part No.	Description
	Control key	Varies depending on quantity ordered.	4286 9200 80	Key used to control the product
	Operating lever	×1	2594 0481 90	Tool used when connecting cable to terminal plate
	Hex key wrench (2 across flats)	Varies depending on quantity ordered.	1510 5020 40	Tool used for tightening M4 hex socket set screws
	Operating manual	×1		

NOTE

▶ The quantity of control keys and hex key wrenches included will vary depending on the quantity of product units ordered.

1 - 10 units: ×1 11 - 20 units: ×2 21 - 50 units: ×3 51 or more units: ×4



- Use the control key provided to operate the product. The product may not respond properly to commands if an object other than the supplied control key is used.
- The control key provided incorporates an extremely strong magnet. Holding the control key close to credit cards, ID cards, or other magnetized products may corrupt data recorded on these objects.

3-1-5 Optional accessories

Optional accessory		Part No.	Description
	Calibration adapter (for IRF sensor)	4283 9011 00	SD-3RI calibration adapter <material> Body: PP Nipple: Stainless steel/Teflon</material>
	Calibration adapter (for NCF/SGF/SHF sensor)	4283 9012 70	SD-3NC/GH/GHS/SP calibration adapter <material> Body: PP Nipple: Stainless steel/Teflon</material>
	Calibration adapter (for ESF sensor)	4283 9013 40	SD-3EC/ECS/ECB calibration adapter <material> Body: PP Nipple: Stainless steel/Teflon</material>
	Protective cover	Wall mounting 4283 9019 80 Pole mounting 4283 9045 60	Cover to protect the SD-3 main unit <material> SUS316</material>
	Sunshade cover	4283 9015 90	Cover to suppress temperature rises due to direct sunlight or radiant heat <material> SUS316</material>
	Splash guard (for IRF sensor)	4283 9076 10	SD-3RI cover to protect sensor from water and dust The identification number "1" is engraved on the underside. <material></material>


Optional access	sory	Part No.	Description
	Splash guard (for NCF/SGF/SHF sensor)	4283 9077 80	SD-3NC/GH/GHS/SP cover to protect sensor from water and dust The identification number "2" is engraved on the underside. <material> Resin</material>
	Splash guard (for ESF sensor)	4283 9078 50	SD-3EC/ECS/ECB cover to protect sensor from water and dust The identification number "3" is engraved on the underside. <material> Resin</material>
	Blanking plug	4283 9018 10	M25 × 1.5 blanking plug <material> Equivalent to SUS316</material>
	Adapter	4283 9058 70	Adapter to convert M25 × 1.5 screw thread to 1/2NPT screw thread <material> Equivalent to SUS316</material>
	Adapter	4283 9057 00	Adapter to convert M25 × 1.5 screw thread to 3/4NPT screw thread <material> Equivalent to SUS316</material>
	Adapter	4283 9047 10	Adapter to convert M25 × 1.5 screw thread to M20 × 1.5 screw thread <material> Equivalent to SUS316</material>
	Silicone removal filter (SI-8)*3 (for NCF/SGF/SHF sensor)	4383 0030 20	Filter for SD-3NC/GH/GHS/SP to remove trace amounts of silicone from the air. Filter for removing trace amounts of silicone from the air. This can extend sensor life.*1

Optional accessory		Part No.	Description
	Activated carbon filter (CF-8304)*3 (for NCF/SGF/SHF sensor)	4383 0040 10	Filter for SD-3NC/GH/GHS/SP to remove trace amounts of silicone from the air. This can extend sensor life. The silicone removal capability of this filter exceeds that of the silicone removal filter.*2 It can also be used to remove interference gases. This can minimize interference effects from gases other than the detection target gas.
	Duct mounting kit (for GD-3RI) (for GD-3NC/GH/SP) (for GD-3EC)	4262 9674 10 4262 9675 90 4262 9676 60	Kit for installing a remote sensor head (GD-3) to a duct <material> SUS316</material>
	Mounting angle for GD-3	4283 4319 20	This angle is used to mount the GD-3 with splash guard on the wall. <material> SUS316</material>
	Tag plate with wire chain	0717 0319 40	Tag plate made of SUS316. It can be attached to the enclosure of this unit.
	HART modem connector	2905 2439 10	Connector used when connecting a HART modem
	Lightning arrester (3-wire connection) (TP48-3-N-NDI)	4283 9055 50	Device to limit momentary surge voltages caused by lightning strikes. Includes adapter (M25 x 1.5 → 1/2NPT).
	Lightning arrester (4-wire connection) (TP48-4-N-NDI)	4283 9056 20	Device to limit momentary surge voltages caused by lightning strikes. Includes adapter (M25 x 1.5 → 1/2NPT).

Optional accessory		Part No.	Description
	Fuse	2564 0125 10	Littelfuse's fuse (1.25 A, 100 V DC)
	U bolt	4283 9046 30	Bolt used for mounting the main unit to a pole (size: 50A (2B)) <material> SUS304</material>
	Waterproof cap	4283 9162 60	Cap to make the sensor section IP66/67. <material> Resin</material>

^{*1} Installing the silicone removal filter will limit the target gases that can be detected.
*2 The range of target gases that can be detected will be more limited than when the silicone removal filter is fitted.
*3 If you use a filter, we recommend fitting a splash guard.

3-2 Part names and functions

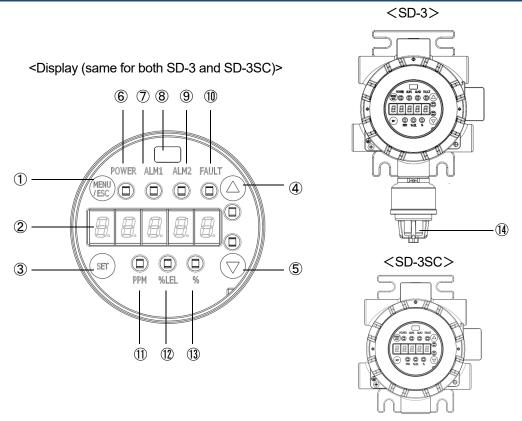


No.	Name	Function
1	MENU/ESC key	Hold down this key in detection mode to switch to user mode. In user mode and maintenance mode, this key is used to cancel a setting or return to the previous screen. Hold down this key in user mode or maintenance mode to return to detection mode.
2	7-segment LED display	Displays the gas concentration and other information.
3	SET key	Press in detection mode to display the ALM1 (first alarm) and ALM2 (second alarm) alarm setpoints. In user mode and maintenance mode, this key is used to confirm a value or select a setting.
4	▲ key	In user mode and maintenance mode, this key is used to select a setting item and adjust (increase) a value.
⑤	▼ key	In user mode, this key is used to switch menus or adjust (lower) a value. Press in detection mode to display the external output.
6	Power lamp (POWER)	Power lamp. Lights up in green when the power is on. The lamp flashes in green in user mode and maintenance mode.
7	Alarm lamp (ALM1)	ALM1 (first alarm) alarm lamp. Lights up in red when the ALM1 (first alarm) alarm setpoint is reached.
8	Infrared port	IrDA communication port
9	Alarm lamp (ALM2)	ALM2 (second alarm) alarm lamp. Lights up in red when the ALM2 (second alarm) alarm setpoint is reached.
10	Fault lamp (FAULT)	Fault lamp. Lights up in yellow when an abnormality is detected in the product.
11)	PPM lamp	Lights up in green when a ppm concentration range gas concentration is displayed.
12	%LEL lamp	Lights up (green) when a gas concentration within the %LEL concentration range is displayed.
13	% lamp	Lights up in green when a vol% concentration range gas concentration is displayed.
14)	Sensor	Incorporates a gas-detecting sensor.


3-3 Block diagrams

The block diagrams (electrical circuit diagrams) for the product are given below.


<SD-3>

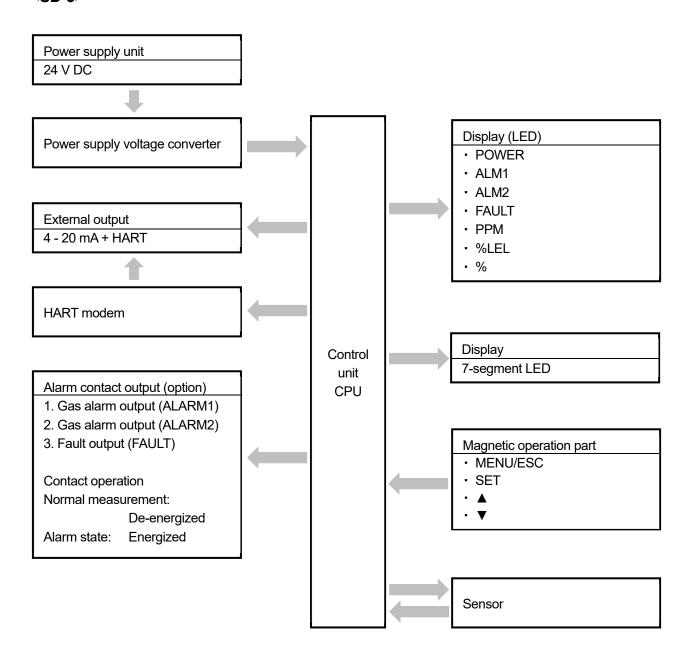


<SD-3SC>

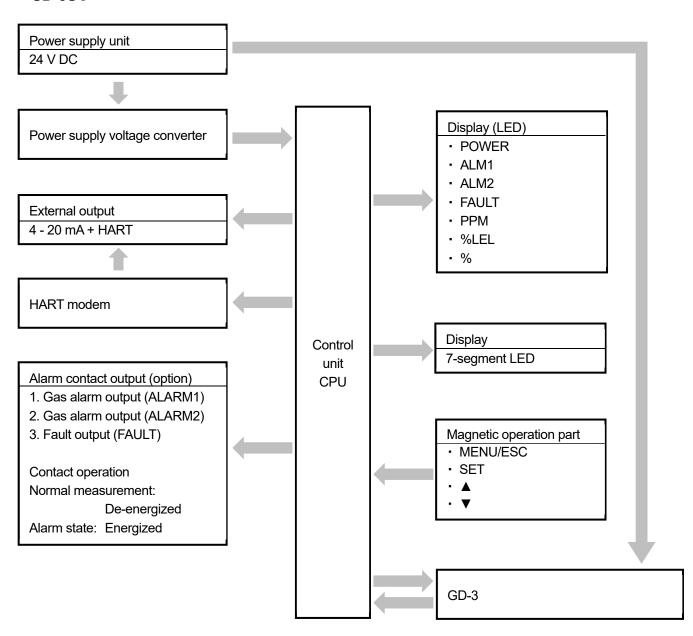


<GD-3>

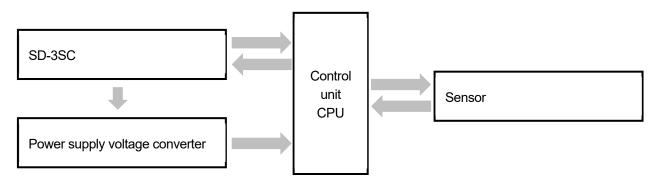

<SD-3> (RS-485)

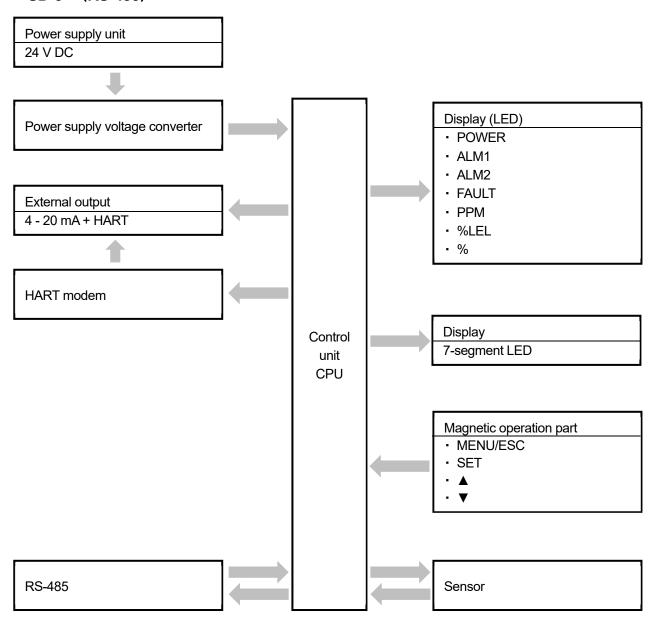

<SD-3SC> (RS-485)

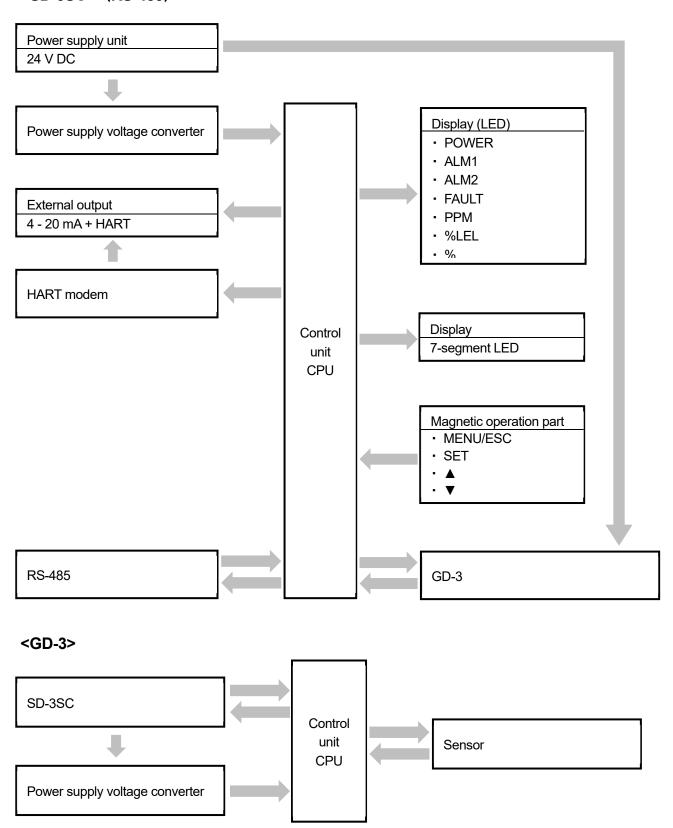

4

Installation

4-1 Installation precautions

Selecting an appropriate installation location is vital for system performance.

Be sure to observe the following precautions before installing.

Failure to comply with these precautions may result in failure of the product or improper function.



- The product is a precision device. Certain conditions at the location (environment) where the product is
 installed may prevent optimum performance. Check the environment at the installation location and take
 all required precautionary measures depending on circumstances.
- Install the number of units needed at the appropriate locations to ensure that the product plays an important role in safety and disaster prevention.
- Areas where gas is likely to leak or accumulate will differ depending on the gas type and individual work areas. Thoroughly consider the installation locations and number of units to be installed before installation.
- Dirt, snow, mud, or external devices must not prevent gas or vapor from contacting the sensor. The
 protection class does not guarantee that the instrument will successfully detect gases during and after
 exposure to these conditions. Check the operation and calibrate the instrument if it has been exposed
 to dust deposits, submersion, or high pressure water.
- The recommended installation orientation of the detector is with the sensor facing downward. Other
 orientations are acceptable if the sensor is protected from mechanical damage, dirt, and water
 intrusion.
- Use genuine special accessories.

4-1-1 General installation information

Observe the following precautions when installing the product:

- If the product is installed in a location where the ambient temperature exceeds 65 °C, use cables designed for use at temperatures at least 5 °C above the maximum anticipated ambient temperature.
- The SD-3 and SD-3SC main units each have two M25 × 1.5 connectors for use when wiring in the field.
 Connectors must always be blanked off with blanking plugs when not in use.
- The GD-3 has two M25 × 1.5 connectors for connecting the SD-3SC. The connector not in use must be blanked off with a blanking plug at all times.
- Do not mount a sensor that uses a different detection principle from the model type.
- · Use ferrules on the ends of stranded cables.
- Secondary circuits should be supplied from an insulated source. (Not suited to alarm relay contacts)
- If installing without using conduits, use cable glands that comply with the explosion-proof certification. In addition, connect cable shielding to the main unit, cable glands, and indicators to increase immunity to electromagnetic noise and other external factors.
- Select the cable, terminal plate, and other parts for wiring to alarm relays (optional) to suit the rated voltage, current, and environmental conditions.
- Use shielded twisted pair cable for RS-485 communication connections.

In addition, carefully consider the following points when installing:

- · All possible effects on the installation of the gas detector system
- Restrictions and regulations concerning the installation of the gas detector system.
- Regulations concerning the operation, power supply, and signal cable connections for the gas detector system
- · Ambient environmental effects to which the gas detector system may be subject
- Specifics of the physical characteristics, environmental air movement and flows, and latent leaks of the detection gas
- · Accessibility for required maintenance and the shape of the accessories used

4-1-2 Restrictions regarding installation

<Do not install in locations subject to vibration or impact.>

The product contains precision electronic components. Install the product in a stable location not exposed to vibration, impact, or risk of falling.

<Do not install in locations exposed to water, oil, or chemicals.>

Avoid installing in locations that pose the risk of splashing liquids such as water, oil, and chemicals. Deploy the optional protective cover (main unit protection) and splash guard (sensor protection) if the product must be installed in a location where it may be exposed to these factors.

<Do not install in locations where temperatures exceed the operating temperature range.>

For information on the product operating temperature range, refer to '8-1. Detection target gases for individual detection principles'.

Install in a stable location where temperatures do not exceed the operating temperature range during use.

<Do not install in locations subject to direct sunlight or sudden temperature changes.>

Install away from locations subject to direct sunlight or radiant heat (infrared radiation from high temperature bodies) and locations subject to sudden temperature changes. Failure to do so may expose the product to temperatures that exceed specified thresholds, internal condensation, or rapid temperature fluctuations the product cannot handle.

Use of the optional sunshade cover is recommended when using the product in locations subject to direct sunlight.

<Do not install in locations where maintenance is dangerous or not possible.>

The product requires periodic maintenance.

Do not install in the following or similar locations where maintenance is dangerous or not possible:

- · Locations where systems must be stopped to allow maintenance
- · Locations where part of the system must be detached to allow maintenance
- · Locations where the product cannot be removed due to the presence of pipes or racks
- Locations where maintenance work is hazardous—for example, close to high-voltage cables

<Do not install in improperly grounded system housings.>

When installing in a system housing, be sure to implement a Class D-equivalent ground connection.

<Do not install in the presence of miscellaneous gases.>

Do not install in locations where the following gases are present:

Sensor type	Gases affecting sensor sensitivity	Sensor-corroding gases
SGF	Organic silicone gas (e.g., D4 siloxane, D5 siloxane)	
SHF	Catalyst poison (phosphorus compounds,	Corrosive gases (e.g., SOx, NOx) Acid gases (e.g., HF, HCl)
NCF		
IRF	None	
ESF	None	None

<Pre><Pre>recautions when installing in the presence of interference gases>

Take care when installing in locations where the following interference gases are present:

Sensor type	Interference gas
SGF	Hydrocarbons, alashala, argania salventa, ata, ather than the target gas
SHF	Hydrocarbons, alcohols, organic solvents, etc. other than the target gas
NCF	Hydrocarbons, alcohols, organic solvents, etc. other than the target gas
IRF	Combustible gas sensor: Hydrocarbons, alcohols, organic solvents, etc. other than the target gas CO ₂ sensor: CO, N ₂ O, NO, etc.
ESF	Differs depending on sensor. (e.g., H ₂ with CO sensor)

<Use the appropriate power supply and power cable.>

The product requires a 24 V DC (18 V - 30 V DC) power supply to operate. The power cable used should have a cross section of 1.308 mm^2 (AWG16) or 2.082 mm^2 (AWG14). Use shielded 3-core cable.

For the installation of cables and power supply

Due to the resistor value of the cable, a voltage drop occurs, causing the actual voltage supply to SD-3 (at the SD-3 terminal) to be lower than the voltage supply at the power source. Because of this, when the voltage drop by the cable causes the actual voltage supply to become below 18VDC, the voltage supply at the power source needs to be increased.

This voltage drop is determined by the type and length of the cable, ambient temperature, as well as the current consumption value of SD-3.

The current consumption value of SD-3 varies depending on the sensor type and the alarm relay state in the SD-3.

<How to obtain the voltage supply at the power source -1>

Use the equation below to obtain the voltage supply value at the power source.

Voltage supply at the power source

= A (Current consumption of SD-3) x B (Resistor value of the cable to be installed) + 18V

A: Current consumption of SD-3

Choose from the list below. (@18V)

Туре	Current consumption	Remarks
	(max.)	
SD-3RI	170mA	
SD-3NC	200mA	
SD-3EC	140mA	
SD-3ECS	140mA	
SD-3ECB	150mA	
SD-3GH	200mA	
SD-3SP	160mA	
SD-3SC+GD-3RI	180mA	
SD-3 SC+GD-3NC	220mA	
SD-3 SC+GD-3EC	150mA	
SD-3 SC+GD-3ECS	150mA	
SD-3 SC+GD-3ECB	160mA	
SD-3 SC+GD-3GH	220mA	
SD-3 SC+GD-3SP	180mA	

B: Resistor value of the cable to be installed

The maximum resistor value can be determined by the type and length of the cable to be installed, and the upper limit of the operating temperature.

e.g.)

A: The maximum current consumption value = 170 mA (SD-3RI)

B: The maximum resister value of the cable to be installed = 24Ω (CVV-S, 1.308 mm2, 1250m, @70°C)

Voltage supply at the power source =
$$170\text{mA} \times (24\Omega \times 2) + 18\text{V}$$

= $8.16\text{V} + 18\text{V}$
= 26.16V (or higher)

<How to obtain the voltage supply at the power source -2>

When the method in 1 cannot be applied because the type and length of the cable to be installed is unknown, or to make sure if the voltage calculated in 1 poses no problem for the actual voltage to supply, use this method described here.

Alarm test is performed under the following conditions (refer to 7-3-2 Performing alarm test).

Set the contact action ON.

Press ▲ key to increase the indicator until it reaches full scale over (nnnn), and when that happens, make sure that the voltage of the SD-3 terminal block is over 18VDC.

Fault test is performed under the following conditions (refer to 7-3-3 Performing fault test).

Set the Fault test ON.

When that happens, make sure that the voltage of the SD-3 terminal block is over 18VDC.

If it's below 18VDC, then increase the voltage supply at the power source. If the temperature at this point increases during the operation, give enough margin to the voltage supply by compensating the voltage drop caused by the increase of the cable resistor value.


<Install away from noise-emitting devices (main unit and cables).>

Install away from locations where high-frequency or high-voltage devices are present. Failure to do so may result in electromagnetic interference.

<Use the appropriate impedance for the 4 - 20 mA signal output.>

The impedance for the 4 - 20 mA signal output must not exceed 600 Ω to ensure correct operation. This will vary depending on the voltage supplied to the product. The maximum and minimum impedance specified must be satisfied, based on factors such as product operating voltage and interface (HART).

<4 - 20 mA signal output impedance derating depending on supply voltage differences>

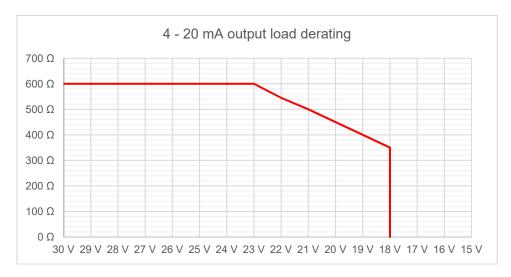

<4 - 20 mA signal output impedance range when using HART communication>
Devices equipped with a HART interface can be operated via HART communication or HART multidrop mode.

Operating mode	Signal impedance range for power supply voltage
Operation without HART communication	Max. 300 Ω at 18 V DC Linear increase to max. 600 Ω at 23 V DC
Operation with HART communication	Min. 250 Ω in range 18 V - 30 V DC
(HART mode)	Max. 300 Ω at 18 V DC Linear increase to max. 600 Ω at 23 V DC
HART multidrop operation	250 Ω to 600 Ω in range 18 V - 30 V DC

<us>Use alarm contacts correctly.>

The alarm contacts on the product are used to transmit signals for operating external buzzers, alarm indicator lamps, or revolving lights. Never use for controls on which human life depends or other mission critical controls (e.g., shutoff valve controls).

Check contact opening and closing periodically, including during regular maintenance. Contacts may not function correctly under certain operating conditions if left inactive for extended periods.


The alarm contact specifications for the product apply under resistance load conditions. If inductive loads occur at the alarm contacts, a counter-electromotive force will be generated at the contacts, leading to the following potential problems:

- · Alarm relay contact welding, insulation failure, contact failure
- Damage to electrical components due to high voltage inside the product
- Malfunctions due to CPU runaway

If the product is used to operate loads, take the following measures to stabilize product operations and protect the alarm contacts:

- Use an external relay (low voltage, not exceeding 100 V AC) to link the circuits (contact amplification). Add a surge absorber (SK1) appropriate for the rating to the external relay.
- Where necessary, add a surge absorber (SK2) on the load side of the external relay.
- Depending on the load conditions, it may be better to add the surge absorber to the contact side. Check load behavior to determine the optimal location.

<SD-3>

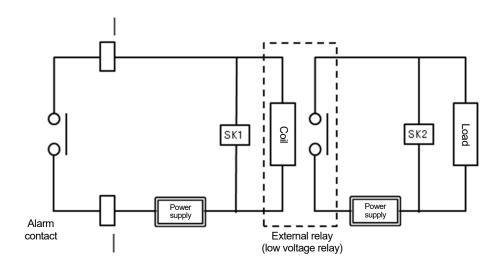

* SK1, SK2: Surge absorbers



 Never use for controls on which human life depends or other mission critical controls (e.g., shutoff valve controls).



- Contacts may not function correctly if left inactive for extended periods. Check contact opening and closing periodically.
- Contact faults may occur if exposed to organic gases or sulfidizing gases for extended periods.
- In principle, do not use the alarm contacts of the product to operate inductive loads. In particular, never use to operate devices like fluorescent lamps and motors.
- If operating inductive loads is absolutely unavoidable, link the circuits using an external relay (contact
 amplification). Since the external relay coil constitutes another inductive load, use a relay operating at low
 voltage (under 100 V AC), and protect the product contacts with a suitable surge absorber (e.g., CR
 circuit).
- Do not use in atmospheres where silicone is present.



A de-energized b contact (break contact) may result in momentary opening in the event of an external
force or other physical impact. If a b contact is used as an alarm contact, implement measures to account
for such momentary operations—for example, by adding a delay operation (of approximately one
second) to the signal on the b contact receiving side.

4-2 System design precautions

Consider the following precautions when designing a system in which the product is used:



- An unstable power supply or noise may result in malfunctions or false alarms.
- Consider the details described in this section before designing a system that uses the product.

4-2-1 Using a stable power supply

The product's external output and alarm contacts may activate as the system stabilizes when the power is turned on or right after an instantaneous power failure. If external output and alarm contacts activate due to power failures or other reason, use a UPS (uninterruptible power system) or take other appropriate measures. The product should be powered using a power supply specified below.

Power supply voltage	24 V DC (18 V - 30 V DC): Main unit terminal voltage	
Time allowed for instantaneous power failures	Up to approx. 20 ms*1	Typical action: Use an external uninterruptible power supply or similar system to guarantee continuous operation and functionality.
Miscellaneous	Do not use with power supplies subject to very high power loads or high frequency noise.	Typical action: Where necessary, use a line filter or other device. Keep the product away from sources of noise.

^{*1:} Restart the product when recovering after instantaneous power failures of 20 ms or more.

4-2-2 Lightning strike protective measures

In factories or plants where cabling is configured as follows, damage may result in the event of lightning strikes due to the cables connected to the devices acting as a receiving antenna for the lightning:

- · When cables are installed outdoors
- When cables are installed in the same duct as cables supplied from outside

In the event of lightning strikes, devices connected to the cables may be damaged by lightning energy. Additionally, note that inductive lightning surges due to lightning strikes cannot be entirely prevented, even if cables are installed in metal ducts or buried underground. While it is not possible to completely protect against lightning disasters, the following protective measures are useful:

<Lightning strike protective measures>

Implement appropriate measures based on environmental conditions and the importance of the facility. A lightning arrester (cable protector) can be installed before the field devices and central processing equipment as a safeguard against inductive lightning surges transmitted through the cables. For information on how to use lightning arresters, please contact the manufacturer.

<Grounding>

Surge noise is caused by lightning strikes and other factors. Devices must be grounded to protect against these noise sources.

NOTE


Lightning arresters contain circuitry to remove voltage surges that could damage field devices. Installing lightning arresters may therefore cause signal attenuation.

Perform an operation check before installing a lightning arrester. Also note that lightning arresters cannot remove all voltage surges.

4-3 Providing maintenance space


When mounting the product, allow space to open and close the covers during maintenance.


<Main unit (SD-3/SD-3SC)>

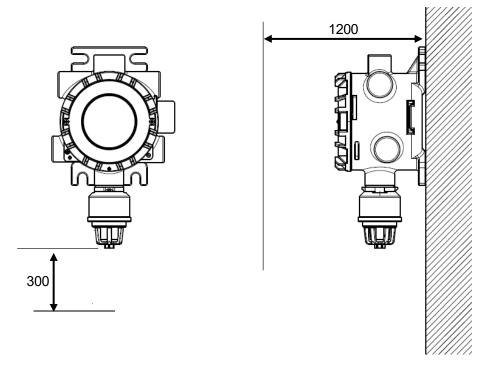

^{*}The diagram illustrates the SD-3. The maintenance space for the SD-3SC is identical.

<Remote sensor head (GD-3)>

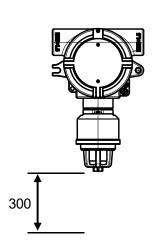

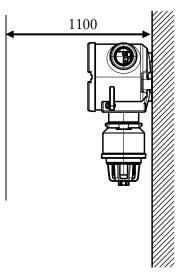



The product requires periodic maintenance.

Do not install in the following or similar locations where maintenance is dangerous or not possible:


- Locations such as within systems that must be stopped for maintenance
- · Locations where part of the system must be detached to allow maintenance
- Locations where the product cannot be removed due to the presence of pipes or racks
- Locations where maintenance work is hazardous—for example, close to high-voltage cables


4-4 Main unit installation

4-4-1 Vertical pole mounting

Mount the main unit (SD-3/SD-3SC) to a vertical pole (size: 50A (2B)) using two U bolts.

- 1 Fit one U bolt around the vertical pole and through the upper slots on the main unit.
- 2 Secure the U bolt to the main unit with two washers, two spring washers, and two M10 nuts.
- 3 Fit the second U bolt around the vertical pole and through the lower slots on the main unit.
- 4 Secure the U bolt to the main unit with two washers, two spring washers, and two M10 nuts.

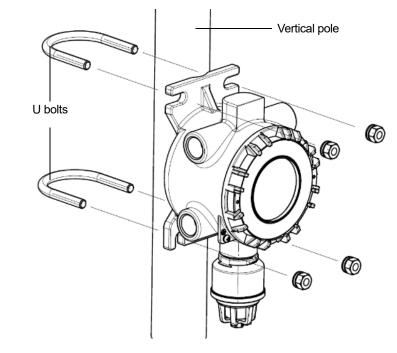

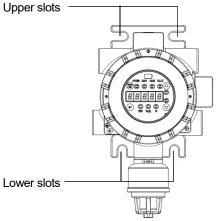


^{*}The diagram illustrates the SD-3. The mounting method for the SD-3SC is identical.

4-4-2 Wall mounting

Mount the main unit (SD-3/SD-3SC) to a wall.

1 Place the main unit against the wall surface and secure with four M10 double SEMS bolts.

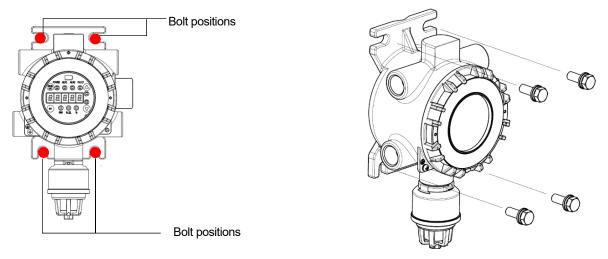

^{*}The diagram illustrates the SD-3. The mounting method for the SD-3SC is identical.



The product requires periodic maintenance.

Do not install in the following or similar locations where maintenance is dangerous or not possible:


- Locations such as within systems that must be stopped for maintenance
- Locations where part of the system must be detached to allow maintenance
- Locations where the product cannot be removed due to the presence of pipes or racks
- Locations where maintenance work is hazardous—for example, close to high-voltage cables

4-4-3 Attaching protective cover


Attach the protective cover to the main unit (SD-3/SD-3SC).

<Pole mounting (pole size: 50A (2B))>


1 Attach the chassis and mounting bracket to the main unit. Secure with four M5 \times 6 double SEMS bolts from behind, as shown in the diagram to the right.

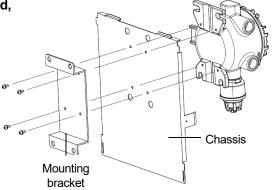

- 2 Fit one U bolt around the vertical pole and through the upper slots on the main unit. Secure with two washers, two spring washers, and two M10 nuts.
- 3 Fit the second U bolt around the vertical pole and through the lower slots on the main unit. Secure with two washers, two spring washers, and two M10 nuts.

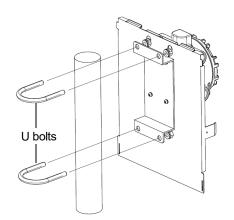


- 4 Attach the protective cover, aligning it with the two lugs at the top of the chassis.
- 5 Secure the protective cover in place by tightening the knurled screws on either side of the cover.

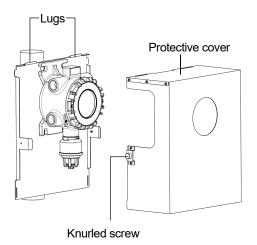


^{*}The diagram illustrates the SD-3. The mounting method for the SD-3SC is identical.

<Wall mounting>

1 Secure the main unit and chassis with four M10 double SEMS bolts.

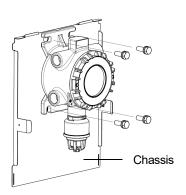

- 2 Attach the protective cover, aligning it with the two lugs at the top of the chassis.
- 3 Secure the protective cover in place by tightening the knurled screws on either side of the cover.

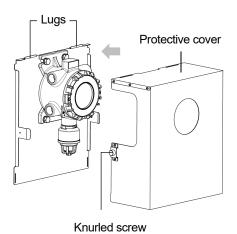


^{*}The diagram illustrates the SD-3. The mounting method for the SD-3SC is identical.

4-4-4 Attaching sunshade cover


Attach the sunshade cover to the main unit (SD-3/SD-3SC).

<Pole mounting (pole size: 50A (2B))>

- 1 Fit one U bolt around the vertical pole and through the upper slots on the main unit. Secure with the chassis, two washers, two spring washers, and two M10 nuts.
- 2 Fit the second U bolt around the vertical pole and through the lower slots on the main unit. Secure with two washers, two spring washers, and two M10 nuts.

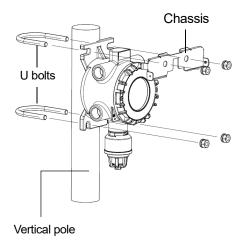


- 3 Attach the sunshade cover, aligning it with the two lugs at the top of the chassis.
- 4 Secure the sunshade cover in place by tightening the knurled screws on either side of the cover.

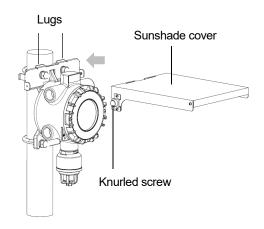


^{*}The diagram illustrates the SD-3. The mounting method for the SD-3SC is identical.

<Wall mounting>

1 Secure the main unit and chassis with four M10 double SEMS bolts.

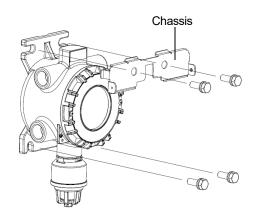

- 2 Attach the sunshade cover, aligning it with the two lugs at the top of the chassis.
- 3 Secure the sunshade cover in place by tightening the knurled screws on either side of the cover.

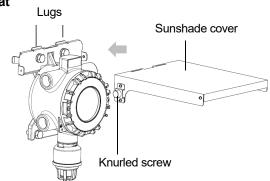


^{*}The diagram illustrates the SD-3. The mounting method for the SD-3SC is identical.

4-5 Remote sensor head (GD-3) installation

4-5-1 Wall mounting

1 Place the remote sensor head (GD-3) against the wall surface and secure with two M6 double SEMS bolts.

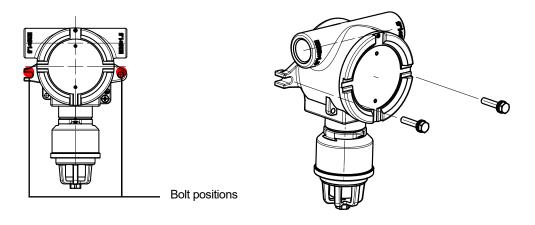


4-5-2 Duct mounting


Attach the remote sensor head (GD-3) to a duct.

Attach to a duct using the duct mounting kit.

The duct mounting kit has the following dimensions:

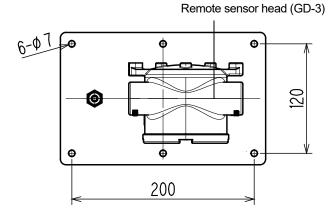


1 Cut out an opening in the top of the duct. Refer to the diagram to the right for the dimensions of the opening.

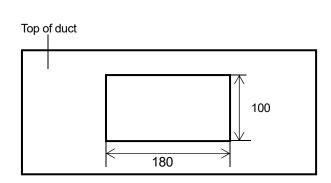



2 Insert the remote sensor head (GD-3) into the duct mounting kit and secure with four M5 bolts.

Connect a tube to the sensor on the remote sensor head (GD-3) to enable calibration. The tube should protrude from the top of the duct mounting kit.

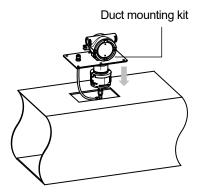


3 Insert the duct mounting kit into the opening in the duct. Secure in place with six M6 bolts.

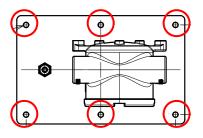

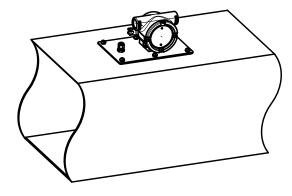

NOTE

- ▶ When mounting the remote sensor head (GD-3) inside a duct, make sure the sensor is not in contact with the duct inner wall.
- ▶ In the duct-mounted version, for external gas calibration, make a piping connection between the guard attached to the sensor section and the duct-mounted gas IN.

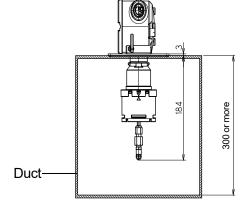


4-6 Connecting the grounding terminal



- Be sure to ground the product before turning on the power.
- To ensure stable operation and safety, be sure to ground the product. Never connect grounding wires to gas pipes.
- Make sure the grounding is Class D equivalent (grounding resistance not exceeding 100 Ω).
- Use cable lugs on the grounding wire to ensure safe grounding with the cable free of slack and twisting.
- Do not ground to the same locations as high frequency or high voltage devices or nearby.

Connect the grounding bolt to the local grounding terminal.

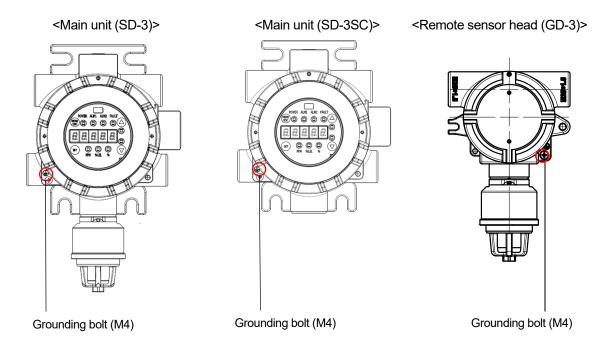

NOTE


▶ The grounding bolt is marked with the (symbol)

4-7 Connecting the power and signal cables


4-7-1 Main unit cable and device connectors

The cable and device connectors on the main unit are as follows:

<SD-3>

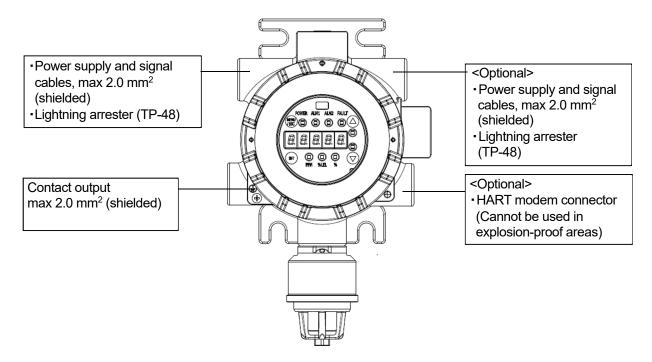

<SD-3SC>

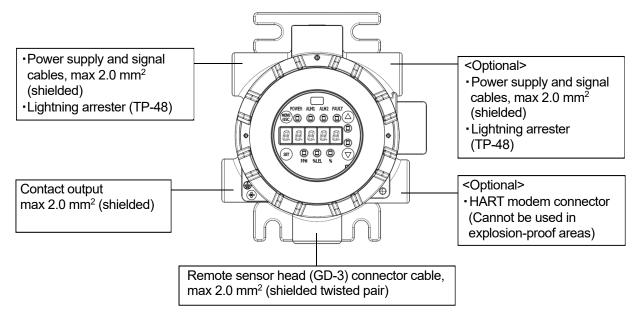

NOTE

- ▶ Use the approved cable glands when connecting the remote sensor head (GD-3).
- ▶ Up to two external cable connectors can be used at the same time (excluding the remote sensor head (GD-3) connector cable). Use the approved cable glands for the connection.
- ▶ Blank off unused connectors with blanking plugs.
- ▶ Do not use more than one adapter per connector.
- ▶ Do not use an adapter together with a blanking plug.


4-7-2 Connecting the power and signal cables to the main unit

Connect the power cable, signal cable, and contact cables to the main unit (SD-3/SD-3SC).

1 Unscrew the M4 hex socket set screw on the main unit cover, then rotate the cover counterclockwise to remove.


Use a hex key wrench (2 across flats) to unscrew the M4 hex socket set screw.

Be careful to avoid dropping the cover while unscrewing and removing it.

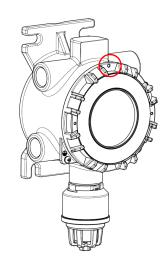

2 Unscrew the two M3 screws securing the display unit.



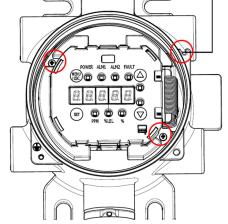


3 Pull out the display unit and hang on the lug on the housing.

The display unit is connected to the terminal plate unit by a flat cable. Pulling with excessive force may disconnect the cable.

During the removal process, avoid pulling on the display unit with excessive force.


4 Ground the main unit.

Make sure the grounding is Class D equivalent (grounding resistance not exceeding 100 Ω). For information on grounding, refer to '4-6 Connecting the grounding terminal'.

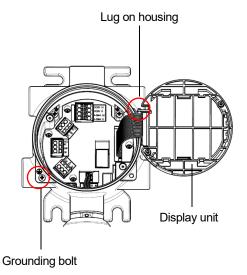

5 Attach cable glands or conduits to the connectors on the main unit.

Use appropriate cable glands or conduits to suit the purpose and type of the cable.

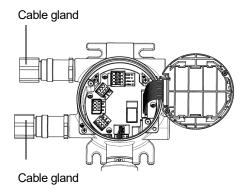

6 Pull out the terminal plates from the terminal plate board.

7 Connect the power and signal cables to the power and signal terminal plate.


Connect the cables to the following terminals on the power and signal terminal plate. For more information on the contact cable connections, refer to '4-9 Alarm relay setting (option)'. For information on connecting cables to the terminal plate, refer to '4-7-5 Connecting cables to the terminal plate'.

<Using 3-core cable>

209 0 00.0 00		
Terminal No.	Power/signal cable connection	
1	Power supply (+)	
2	Common (power supply (-), signal (-))	
3	Signal (+)	

<Using 4-core cable>

Terminal No.	Power/signal cable connection
1	Power supply (+)
2	Power supply (-)
3	Signal (+)
4	Signal (-)

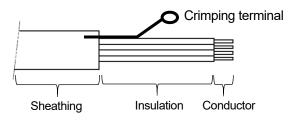


Recommended insulation length: 40 - 50 mm

When connecting cables, connect the cable shielding to the terminals at the top left or top right on the inside of the main unit.

Depending on the installation location, noise interference may result. If this happens, remove the shielding.

8 Connect the required number of contact cables to the contact output terminal plates.


For information on connecting cables to the terminal plate, refer to '4-7-5 Connecting cables to the terminal plate'.

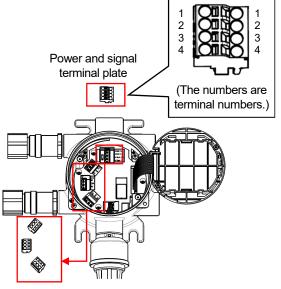

Contact output terminal plates


^{*}No contact output terminal plate is present with the no contact output option.

9 Mount the terminal plates on the terminal plate board. Adjust the cable position so that no load is applied to the terminal plates.

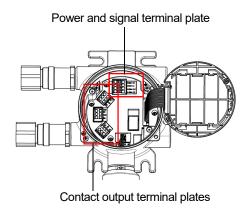

10 Return the display unit to its original position and secure with the two M3 screws.


Take care not to trap the cable here.

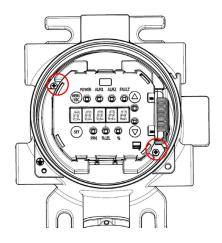

11 Rotate the cover clockwise to attach and secure with the single M4 hex socket set screw.

Use a hex key wrench (2 across flats) to tighten the M4 hex socket set screw.

Take care not to trap the cable when attaching the cover. Rotate the cover clockwise until it moves no further to securely fasten in place.

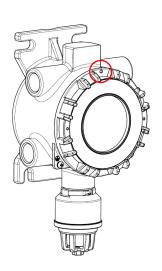


^{*}The diagram illustrates the SD-3. The connection method for the SD-3SC and RS-485 are identical.

4-7-3 Connecting the power and signal cables to the remote sensor head (GD-3)


1 Unscrew the single M4 screw on the remote sensor head (GD-3) cover.

Use a hex key wrench (2 across flats) to unscrew the M4 hex socket set screw.

Be careful to avoid dropping the cover while unscrewing and removing it.

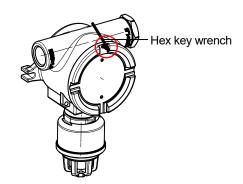


2 Rotate the cover counterclockwise and remove.

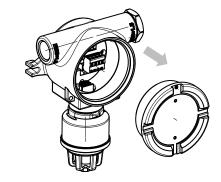


3 Attach a cable gland or conduit to the connector on the remote sensor head (GD-3).

Use an appropriate cable gland or conduit to suit the purpose and type of the cable.

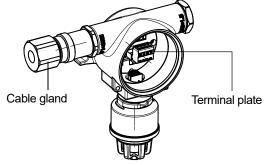


4 Pull out the terminal plate (TN1) from the terminal plate board.

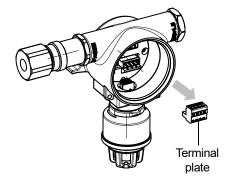

5 Connect the power and signal cables to the terminal plate.

Connect the cables to the following terminals on the terminal plate. For information on how to connect cables to the terminal plate, refer to '4-7-5 Connecting cables to the terminal plate'.

Terminal No.	Power/signal cable connection
1	Power supply (+)
2	Power supply (-)
3	Signal (+)
4	Signal (-)

 



When connecting cables, connect the cable shielding to the terminals at the top left or top right on the inside of the main unit.


Depending on the installation location, noise interference may result.


In such cases, remove the shielding.

6 Route the cable from inside the main unit to the connector.


Route to the connector on the side where the cable gland or conduit is attached.

7 Mount the terminal plate on the terminal plate board. Adjust the cable position so that no load is applied to the terminal plates.

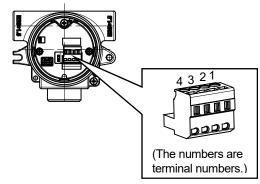


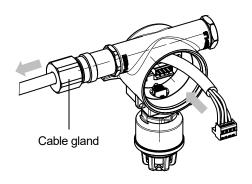
 
<With cable (external cable) routed to right-hand side>



 
<With cable (external cable) routed to left-hand side>



8 Rotate the cover clockwise to attach and secure with the single M4 hex socket set screw.

Use a hex key wrench (2 across flats) to tighten the M4 hex socket set screw.

Take care not to trap the cable when attaching the cover. Rotate the cover clockwise until it moves no further to securely fasten in place.

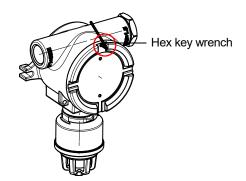


4-7-4 Connecting the main unit (SD-3SC) and remote sensor head (GD-3)


1 Unscrew the M4 hex socket set screw on the main unit (SD-3SC) cover, then rotate the cover counterclockwise to remove.

Use a hex key wrench (2 across flats) to unscrew the M4 hex socket set screw.

Be careful to avoid dropping the cover while unscrewing and removing it.

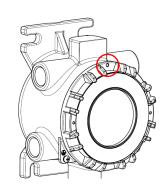


2 Unscrew the two M3 screws securing the display unit.

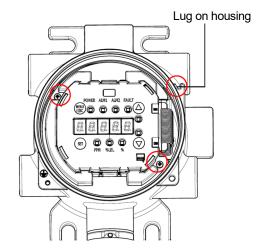

3 Pull out the display unit and hang on the lug on the housing.


The display unit is connected to the terminal plate unit by a flat cable. Pulling with excessive force may disconnect the cable.

During the removal process, avoid pulling on the display unit with excessive force.

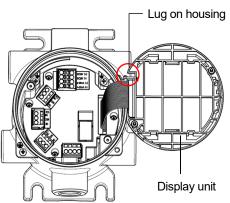


4 Attach a cable gland or conduit to the connector on the main unit.

Use an appropriate cable gland or conduit to suit the purpose and type of the cable.

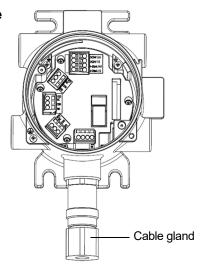


- 5 Pull out the remote connection terminal plate from the terminal plate board.
- 6 Unscrew the single M3 screw securing the clamp and remove the clamp.

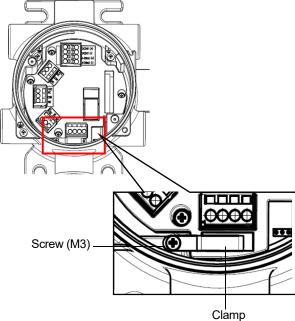

7 Connect the power and signal cables extending from the remote sensor head (GD-3) to the remote connection terminal plate.


Connect the cables to the following terminals on the remote connection terminal plate. For information on connecting cables to the terminal plate, refer to '4-7-5 Connecting cables to the terminal plate'.

Terminal No.	Power/signal cable connection
1	Power supply (+)
2	Power supply (-)
3	Signal (+)
4	Signal (-)

 

Recommended shielding length: 30 - 40 mm Recommended insulation length: 130 - 140 mm


8 Mount the terminal plate on the terminal plate board. Adjust the cable position so that no load is applied to the terminal plates.

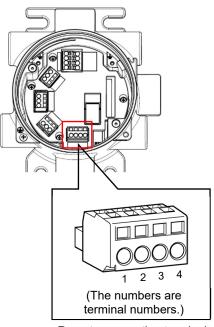

Remote connection terminal plate


9 Clamp the shield wire.

Use the single M3 screw to clamp the cable shielding.

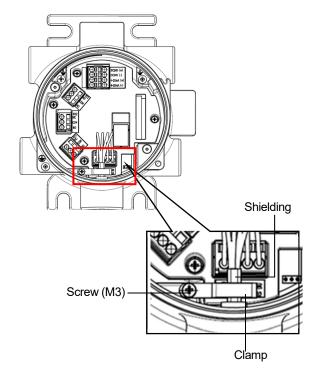

10 Return the display unit to its original position and secure with the two M3 screws.


Take care not to trap the cable here.

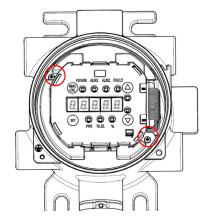


11 Rotate the cover clockwise to attach and secure with the single M4 hex socket set screw.

Use a hex key wrench (2 across flats) to tighten the M4 hex socket set screw.


Take care not to trap the cable when attaching the cover. Rotate the cover clockwise until it moves no further to securely fasten in place.

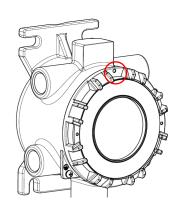


<SD-3SC and GD-3 connection example>

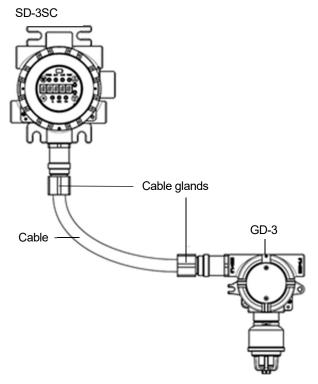


<SD-3/SD-3SC and RM-5003 terminal plate connection example>

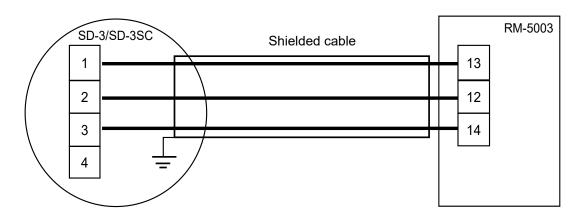

<Indicator connection example>

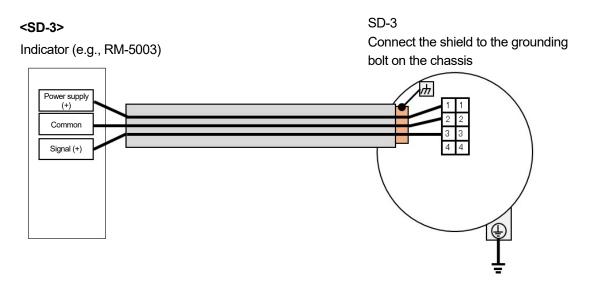

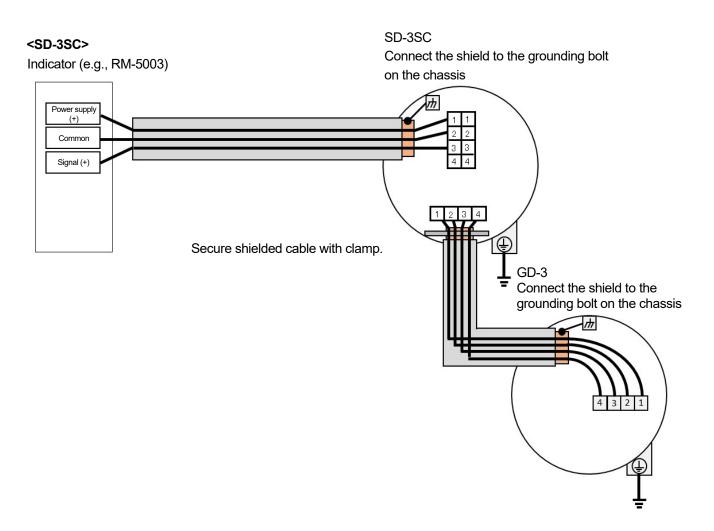

4-7-5 Connecting cables to the terminal plate

Strip the cable to the specified length and connect to the cable wire insertion holes on the terminal plate.

<Terminal plate specifications>

Rated voltage: 300 V ACRated current: 10 A

Specifications will vary depending on the cable used.

<Connecting conditions>

- Cable used: 0.25 mm² 2.5 mm²
- Maximum sheathing external diameter: 4.1 mm
- Stripped wire (conductor) length: 8 mm 9 mm (9 mm 10 mm for SD-3 TN1 only)
- Connecting tool: Flathead screwdriver (blade tip 2.5 mm × 0.5 mm) or operating lever (provided)



Be sure to strip the cable to the specified (conductor) length.

- Conduction faults or overheating may result if the stripped wire (conductor) length is too short and the wire is clamped incorrectly.
- Conduction faults or overheating may result if the stripped wire (conductor) length is too short and the wire sheathing is clamped.
- An insulation failure or short circuit may result if the stripped wire (conductor) length is too long and the wire is exposed.
- Make sure the wire does not splay. An insulation failure or overheating may result if the wire splays when inserted.
- To avoid the above, if the stripped wire is stranded wire cable, we recommend using a bar terminal (ferrule).



<Compatible rod terminal>

If you use rod terminals, use the following item:

- · Rod terminal (ferrule): Model 216 series (manufactured by WAGO)
- Crimping tool: Model Variocrimp 4 (206-1204) (manufactured by WAGO)



 Be sure to use the specified rod terminals. We cannot guarantee performance if you use rod terminals other than those specified.

<Connecting cables to terminal plate>

To connect cables to the terminal plate, use the operating lever provided as a standard accessory or a flathead screwdriver (blade tip 2.5 mm × 0.5 mm).


The operating lever provided as a standard accessory cannot be used when connecting power and signal cables to TN1 on the SD-3. Use a flathead screwdriver in this case.



- · Be sure to use the correct tools.
- As a rule, only one cable can be connected to each wire insertion hole.
- If a cable is inserted into the screwdriver slot, the conductor may not make contact, resulting in conduction faults or overheating.

When using the operating lever provided as a standard accessory, connect the cable to the terminal plate as follows.

- 1 Hook the operating lever on to the screwdriver slot (rectangular hole) in the terminal plate as shown in the figure to the right.
- 2 Push the operating lever with your finger to push down the spring inside the terminal plate.

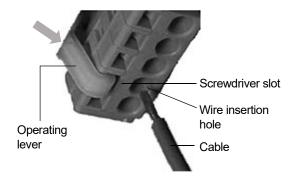

While continuing to press the operating lever, insert the cable into the wire insertion hole (round hole) until it contacts the end.



4 Release the operating lever.


The cable is now connected to the terminal plate.

Gently pull on the cable to confirm that it is correctly connected.


Avoid pulling with excessive force.

When using a flathead screwdriver to connect to TN1 on the SD-3, connect the cable to the terminal plate as follows:

1 Insert the flathead screwdriver into the screwdriver slot (rectangular hole) in the terminal plate as shown in the figure to the right.

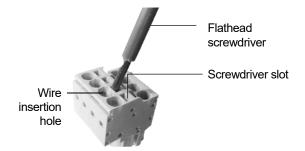

With the flathead screwdriver still being inserted, insert the cable into the wire insertion hole (round hole) until it contacts the end.

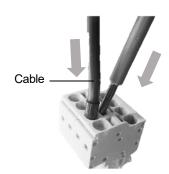

3 Release the flathead screwdriver.

The cable is now connected to the terminal plate.


Gently pull on the cable to confirm that it is correctly connected.

Avoid pulling with excessive force.

4-8 Mounting the sensor

Mount the sensor on to the main unit (SD-3) or remote sensor head (GD-3).


- 1 Remove suction cap, splash guard, and filter, if fitted.
- 2 Unscrew the single M4 bolt securing the sensor guard.
 Use a hex key wrench (2 across flats) to unscrew the M4 hex socket set screw.

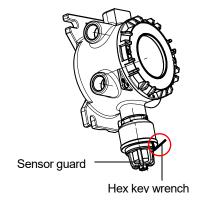

3 Rotate and remove the sensor guard.


Remove using a hex key wrench (8 across flats) or wrench.

4 Pull out and remove the sensor, if fitted.

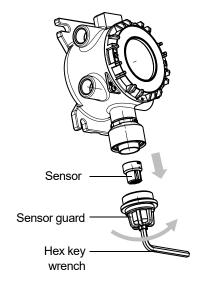


5 Match the main unit connector and sensor connector and fully insert the sensor.

Push the sensor all the way into the main unit connector. Avoid forcibly turning or pushing in the sensor when inserting it, as this may damage the main unit. Take care when inserting.

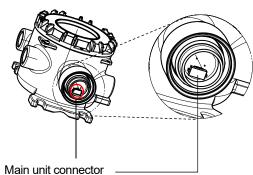


6 Confirm that the sensor is fully inserted.

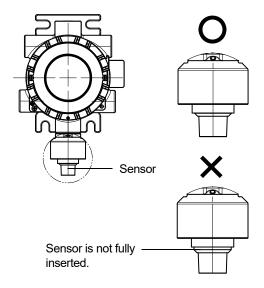

- 7 Attach the sensor guard to the main unit.
 - Attach using a hex key wrench (8 across flats) or wrench.
- 8 Use the single M4 hex socket set screw to secure the sensor guard in place.

Use a hex key wrench to tighten the M4 hex socket set screw.

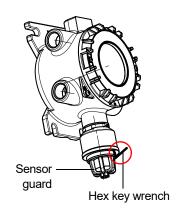

*The diagram illustrates the SD-3. The mounting method for the remote sensor head (GD-3) is identical.



• Depending on the sensor, some fluctuation of the reading may occur if foreign objects are introduced while replacing the sensor.

4-9 Alarm relay setting (option)

The product can be operated as a standalone unit by setting an alarm relay. By default, the alarm relay is set to a de-energized state.



• If using a supply voltage of 30 V AC or 42.4 V DC or greater, either fit protective tubing to the cable or use a double insulation cable.




- Note that recurring use with the alarm relay contacts normally closed may result in the contacts seizing
 due to minute vibrations.
- Connect the alarm relay cable and sensor before turning on the power to the product.

To set the alarm relay, connect the alarm unit cables to the TN2 (Relay1), TN3 (Relay2), and TN4 (Relay3) terminal plates on the main unit (SD-3/SD-3SC).


1 Unscrew the M4 hex socket set screw on the main unit cover, then rotate the cover counterclockwise to remove.

Use a hex key wrench (2 across flats) to unscrew the M4 hex socket set screw.

Be careful to avoid dropping the cover while unscrewing and removing it.

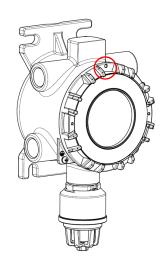


2 Unscrew the two M3 screws securing the display unit.

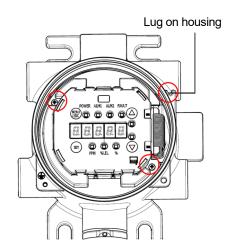

3 Pull out the display unit and hang on the lug on the housing.

The display unit is connected to the terminal plate unit by a flat cable. Pulling with excessive force may disconnect the cable.

During the removal process, avoid pulling on the display unit with excessive force.

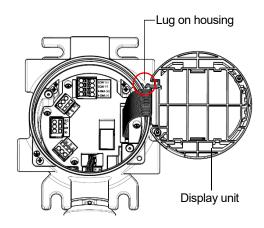

- 4 Pull out the terminal plates (TN2 (Relay1:ALARM1), TN3 (Relay2:ALARM2), and TN4 (Relay3:FAULT)) from the terminal plate board.
- 5 Connect the alarm unit wires to the corresponding terminals on the detached terminal plates.


Use either terminal 1 (N.O.) or terminal 3 (N.C.) on the terminal plate.

For information on how to connect cables to the terminal plates, refer to '4-7-5 Connecting cables to the terminal plate'.

Common for TN2 (Relay1:ALARM1), TN3 (Relay2:ALARM2), and TN4 (Relay3:FAULT) (Default (normally de-energized) terminal assignment)

Terminal No.	Cable connection					
1	N.O.					
2	Common					
3	N.C.					

 N.O.: Normally open N.C.: Normally closed




6 Mount the terminal plates (TN2 (Relay1:ALARM1), TN3 (Relay2:ALARM2), and TN4 (Relay3:FAULT)) on the terminal plate board.

Adjust the cable position so that no load is applied to the terminal plates.


7 Return the display unit to its original position and secure with the two M3 screws.

 
Take care not to trap the cable here.




Use a hex key wrench (2 across flats) to tighten the M4 hex socket set screw.

Take care not to trap the cable when attaching the cover. Rotate the cover clockwise until it moves no further to securely fasten in place.

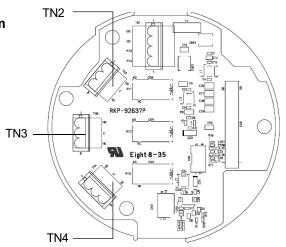

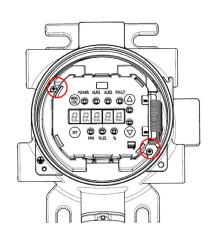

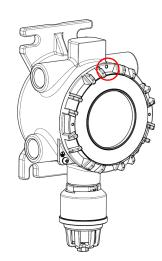


^{*}The diagram illustrates the SD-3. The connection method for the SD-3SC is identical.

4-10 Mounting the splash guard

When using a silicone removal filter or activated carbon filter, fit the filter inside the splash guard before mounting the splash guard.

When using a silicone removal filter or activated carbon filter, remove the splash guard cover, fit the filter inside the splash guard, and reattach the cover.


This step is required only when using a silicone removal filter or activated carbon filter.

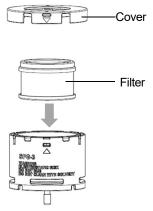

2 Mount the splash guard over the guard on the main unit, then turn clockwise to secure into place.

Mount the splash guard securely by rotating clockwise until it will not rotate any further.

Avoid rotating with excessive force.

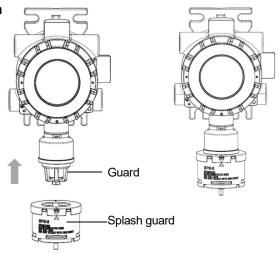

^{*}The diagram illustrates the SD-3. The mounting method for the remote sensor head (GD-3) is identical.

NOTE

▶ Three different splash guard types are available: for the IRF sensor; for the combustible gas sensor; and for the ESF sensor.

The corresponding identification number is engraved on the underside of each splash guard.

• IRF sensor identification number: 1

 Combustible gas sensor identification number: 2

• ESF sensor identification number: 3


▶ The splash guards are compatible with the following SD-3 and GD-3 models:

<for combustible gas</pre>

<for IRF sensor>

SD-3RI


GD-3RI

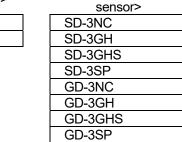

<for ESF sensor>

number

SD-3EC
SD-3ECS
SD-3ECB
GD-3EC
GD-3ECS
GD-3ECB

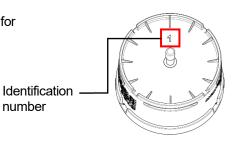


4-11 How to install the lightning arrester

SD-3 can connect a simple lightning arrester. Be sure to use the specified model and connect it to the terminal block for power and signal.

<Using 3-core cable>

Terminal No.	Power/signal cable connection	Connection of lightning arrester
1	Power supply (+)	Blue
2	Common (power supply (−), signal (−))	Brown
3	Signal (+)	Black
Ground	_	Yellow/Green

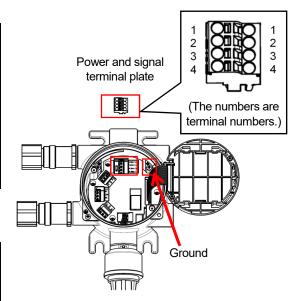

<Using 4-core cable>

Terminal No.	Power/signal cable connection	Connection of lightning arrester
1	Power supply (+)	Blue
2	Power supply (-)	Brown
3	Signal (+)	Black
4	Signal (−)	White
Ground	_	Yellow/Green

NOTE

► [Designated lightning arrester]

Type: TP48-3-N-NDI TP48-4-N-NDI

- *When connecting a lightning arrester, use connection port 2 or 4. If a lightning arrester other than the specified one is used, the explosion-proof performance will not be satisfied.
- ▶ When installing a surge arrester, check its operation before using it. Also, surge arresters cannot remove all surge voltages.



- Only ATEX and IECEx specifications are applicable.
- Discontinue use if operational problems occur.

4-12 RS-485 setting (optional)

RS-485 enables digital communication.



CAUTION


- · Use shielded twisted pair cable.
- Do not wire near trunk cables or high-voltage equipment.
- Do not connect to any device other than the SD-3 series in the Modbus.

To use RS-485, connect the RS-485 communication wires to the terminal block of TN2 on the main unit (SD-3, SD-3SC).

1 Unscrew the M4 hex socket set screw on the main unit cover, then rotate the cover counterclockwise to remove.


Use a hex key wrench (2 across flats) to unscrew the M4 hex socket set screw.

Be careful to avoid dropping the cover while unscrewing and removing it.

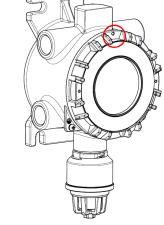

Lug on housing


2 Unscrew the two M3 screws securing the display unit.

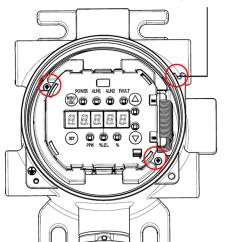

3 Pull out the display unit and hang on the lug on the housing.

The display unit is connected to the terminal plate unit by a flat cable. Pulling with excessive force may disconnect the cable.

During the removal process, avoid pulling on the display unit with excessive force.

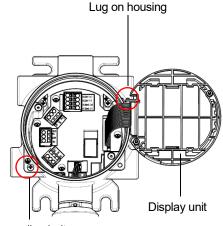

Grounding bolt

- 4 Pull out and remove the terminal block (TN2 (RS-485)) on the terminal block board.
- 5 Only one device connected at the furthest point on the Modbus should have its terminator set to ON, other devices should not have their terminators set to ON.

JP1

Terminal No.	Terminating resistance
1-2(standard)	OFF.
3-2	ON(120 Ω)


6 Connect the wiring for RS-485 communication to the corresponding terminals on the removed terminal block For information on connecting cables to the terminal plate, refer to '4-7-5 Connecting cables to the terminal plate'.

TN2(RS-485)

Terminal No.	Cable connection
1	RS-485(A1)
2	RS-485(B1)
3	RS-485(A2)
4	RS-485(B2)

TN3

Terminal No.	Cable connection
1	Signal ground
2	N.C.
3	Function ground

 

Recommended insulation length: 40 - 50 mm

7 Attach terminal block (TN2 (RS-485)) to terminal block board


Adjust the position of the cable so that there is no load on the terminal block.


8 Return the display unit to its original position and secure with the two M3 screws.


Take care not to trap the cable here.


9 Rotate the cover clockwise to attach and secure with the single M4 hex socket set screw.

Use a hex key wrench (2 across flats) to tighten the M4 hex socket set screw.

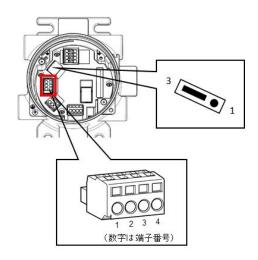

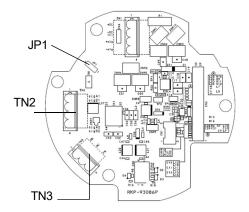

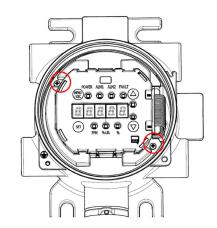

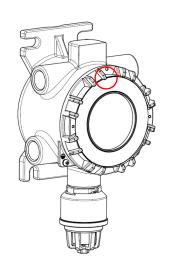

Take care not to trap the cable when attaching the cover. Rotate the cover clockwise until it moves no further to securely fasten in place.

 $^{\star}\,$ The diagram illustrates the SD-3. The connection method for the SD-3SC is identical.

5

Usage Instructions

5-1 Preparations for startup


Carry out the following checks before connecting the power supply. Failure to perform these checks may result in electric shock or damage to the product.

- Check to confirm that the product is grounded.
- · Check to confirm that external wiring is correctly connected.
- · Check to confirm that the power supply voltage is within the rated range.
- External contacts may operate while adjustment is under way. Take precautions to prevent any external effects from the contacts operating.

<How to read display examples>

LED display examples are shown as follows in this operating manual.

The display examples are for cases in which the detection target gas is combustible gas (display units: %LEL lit).

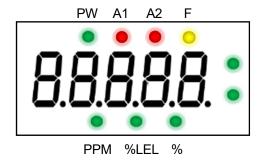

PW: A1: ALM1 (Alarm lamp) A2: ALM2 (Alarm lamp) lit (red) F: FAULT (Fault lamp) | | lit (yellow) PPM: Units lamp lit (green) %LEL: Units lamp lit (green) lit (green) %: Units lamp

5. Usage Instructions 5-2 Startup

5-2 Startup




 Check to confirm that the product has been correctly installed before turning on the power supply (24 V DC).

Turn on the power supply (24 V DC) and start the product.

The product takes approximately 25 seconds before switching to detection mode after the power is turned on. System checks, alarm cutoff, and other initialization occurs during this time.

The display automatically changes as follows after the power is turned on.

The product is normally used in detection mode after the power is turned on.

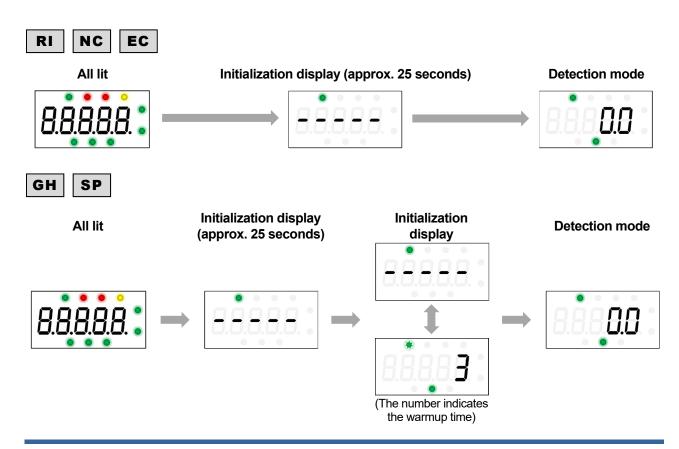




- Never turn off the power while initialization is underway. The internal memory is read during initialization.
- A specific warmup is required for each sensor type at startup and after sensor replacement. Allow the
 product to warm up for the specified time. Expected warmup completion times for the semiconductor type
 (SGF) and hot-wire semiconductor type (SHF) sensors are indicated after initialization. Alarm activation
 and output signals will be unstable during warmup. Notify the relevant department beforehand to avoid
 conditions that may lead to errors.
- Perform calibration once warmup is complete.

5-3 Basic operation flow

After the power is turned on, the product operates as follows when you press the MENU/ESC key:

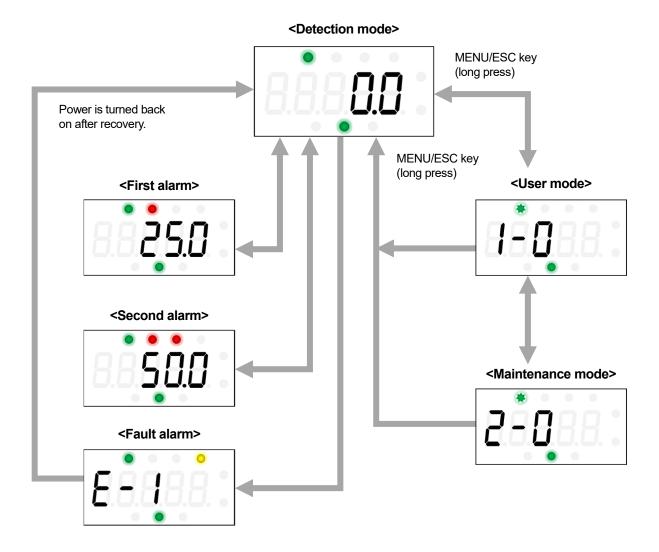



• Switching from detection mode to user mode or maintenance mode in an alarm state will cancel the alarm.

NOTE

▶ The LEDs on the product comprise a five-digit seven-segment display. Setting details are displayed as item numbers

When setting in user mode or maintenance mode, select the item number corresponding to the details to be set. (Refer to '5-5-1 User mode setting items' and '7-2-1 Maintenance mode setting items' in the Technical manual.)

 
5-4 Operating procedure

The product is operated using the control key.

Use the control key to touch the four keys (MENU/ESC key, SET key, ▲ key, and ▼ key) on the front of the product.

This operating manual refers to the action of touching the individual keys using the control key as "pressing."

<Control key>





• Do not press the control key forcibly against the glass.

5. Usage Instructions 5-5 User mode

5-5 User mode

Switching to user mode lets you perform zero calibration and check various settings.



• Do not alter settings unnecessarily. Altering the settings without a proper understanding of the details may prevent the product from operating correctly.

5-5-1 User mode setting items

Item No.	Setting item	LED display	Details
1-0	Version information		Displays the program version and other information. This is not normally used by the user.
1-1	Zero calibration	8.8.8.8.	Performs zero calibration. (Refer to '5-6 Performing zero calibration'.)
1-2	Setting display		Displays the alarm settings. (Refer to '5-7 Checking settings'.)
1-3	Maintenance mode selection		Switches to maintenance mode. (Refer to '7-2 Maintenance mode' in the Technical manual.)

5. Usage Instructions 5-5 User mode

5-5-2 Switching to user mode

1 Hold down the MENU/ESC key (for approximately three seconds) in detection mode.



The product switches to user mode.



2 Press the ▲ or ▼ key to select the required item number, then press the SET key.



Display example: With setting display selected

The details corresponding to the item number selected are displayed. Set or display individual items.



3 Once the operation is complete, hold down the MENU/ESC key (for approximately three seconds). The product switches to detection mode.



Once the operation is complete, be sure to hold down the MENU/ESC key to return to detection mode.
 The product will not detect gases while in adjustment/setting state. If left in user mode, the product will take 10 hours to return to detection mode. Detection will not be available during this time, posing hazards.

5-6 Performing zero calibration

This performs the zero calibration required to ensure accurate measurement of gas concentrations.

Prepare the zero calibration gas, then connect to the product before starting zero calibration.

For information on zero calibration preparation, refer to '7-4-1 Calibration preparation' in the Technical manual.



 Before performing zero calibration for the surrounding atmosphere, confirm that the surrounding atmosphere contains clean air. Performing zero calibration in the presence of miscellaneous gases will prevent correct calibration and create safety hazards in the event of an actual gas leak.



- Perform zero calibration after supplying the zero calibration gas and waiting for the reading to stabilize.
- 1 Press the ▲ or ▼ key in user mode to select [1-1], then press the SET key.



2 Introduce the zero calibration gas, then press the SET key.



Zero calibration starts.



3 Check the zero calibration result.

If zero calibration is successful [PASS] is displayed for three seconds before the display automatically returns to [1-1].



If zero calibration is unsuccessful [FAIL] is displayed and the display returns to [2-1] when the SET key is pressed.



NOTE

- ▶ If zero calibration is unsuccessful because the zero point ([20.9] (vol%) in the case of oxygen) fluctuates significantly around zero, [FAIL] is displayed before the display returns to [1-1]. If this occurs, zero calibration was not performed.
- ▶ [1-1] corresponds to span adjustment for the oxygen deficiency alarm specifications. Introduce clean air to adjust to [20.9] (vol%). For information on span adjustment, refer to '7-4-3 Performing span adjustment' in the Technical manual.

5-7 Checking settings

Displays the alarm settings.

It	em No.	Setting item	Remarks
1-2		Setting display	
	1-2.0	Alarm setting display	Zero follower setting ON/OFF display: NC EC
			Sensitivity correction ON/OFF display: EC
	1-2.1	RS-485 setting dislpay	Displays settings for RS-485 communication.

5-7-1 Checking alarm setpoints

Displays the various alarm settings, including first alarm setpoint, second alarm setpoint, and alarm delay time.

NOTE

- ▶ The zero follower setting ON/OFF display appears only with sensors that rely on the new ceramic or electrochemical detection principle. (Refer to '1-2-2 Detection principles and detection target gases for individual models'.)
- ▶ The sensitivity correction ON/OFF display appears only with sensors that rely on the electrochemical type detection principle. (Refer to '1-2-2 Detection principles and detection target gases for individual models'.)
- 1 Press the ▲ or ▼ key in user mode to select [1-2], then press the SET key.



2 Select [1-2.0], then press the SET key.



3 Check the individual alarm setpoints.

Press the ▲ or ▼ key to toggle between different setpoints.

First alarm setpoint display
 Displays the first alarm setpoint.



- Second alarm setpoint display
 Displays the second alarm setpoint.
- Alarm delay time
 Displays the alarm delay time (in seconds).
- Zero suppression value display
 Displays the positive side suppression value.
- Zero follower ON/OFF display
 Displays whether the zero follower setting is on or off.
 (This is not normally used by the user.)
- Sensitivity correction ON/OFF display
 Displays whether sensitivity correction is on or off.
 (This is not normally used by the user.)

Press the ▲ key to return to the first alarm setpoint display.



4 Press the MENU/ESC key.

Returns to the [1-2.0] display.

NOTE

▶ The alarm setpoints, alarm delay time, and zero suppression value can be set in environmental settings 1 in maintenance mode. (Refer to '7-5 Setting environmental settings 1' in the Technical manual.)

5-7-2 Check RS-485 setting value

Displays RS-485 settings such as address, communication speed, data length, and parity.

1 In user mode, press the ▲ or ▼ key to select [1-2] and press the SET key.



 
2 [Select [1-2.1] and press the SET key.

 


3 Check each setting value of RS-485 setting.

Press the ▲ or ▼ key to toggle the display of setpoint values.

Address display
 Displays the address.







Parity display
 Displays the parity.



- Stop bit display
 Displays the stop bit.
- Communication error display
 When there is no communication for a certain period of time, the "E-6" display setting is made.

 Press the ▲ key to return to the address display.



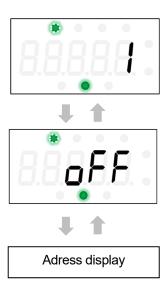

5. Usage Instructions 5-8 Shutting down

5-8 Shutting down

To shut down product operation, turn off the power supply (24 V DC) while in detection mode.



- Shutting down product operation may activate an alarm in an upstream (central) system.
- Before shutting down product operation, make sure the INHIBIT setting is enabled (alarm processes are stopped) in the upstream (central) system. Also check the operation of any devices connected to the external output or external contact output terminal of the product to confirm shutting down the power will not cause problems.
- If using contacts (optional), the contacts may activate when the power supply is turned off.

6

Storage, Relocation, and Disposal

6-1 Procedures for storage or when not in use for extended periods

The product must be stored in the following environment:

- · In a location at normal temperatures and humidity and away from direct sunlight
- · In a location free of gases, solvents, and vapor

<Storage conditions (Sensor)>

Model	Storage limit (years)	Temperature (°C)		re Humidity*1 (% RH)		Pressure (kPa)				Remarks
	1	Minimum	Maximum	Minimum	Maximum	Minimum	Maximum			
SGF	0.5	-10	40	0	90	80	120	The sensor must be stored in the specified packing case.Store in a location away from direct		
SHF	0.5	-10	40	0	90	80	120	 sunlight. Store in an environment free of corrosive gas, vibration, and dust. Avoid condensation and moisture. 		
NCF	0.5	-10	40	0	90	80	120	 Avoid condensation and moisture. Store in an environment free of gases that may act as a catalyst poison (e.g., silicone, chlorine, sulfur gases). 		
IRF	0.5	-10	40	0	90	80	120	 The sensor must be stored in the specified packing case. Store in a location away from direct sunlight. Store in an environment free of corrosive gas, vibration, and dust. Avoid condensation and moisture. 		
ESF	0.5	-10	40	0	90	80	120	 The sensor must be stored in the specified packing case. Store in a location away from direct sunlight. Store in an environment free of corrosive gas, vibration, and dust. Avoid condensation and moisture. Store in an environment free of gases that may act as a catalyst poison (e.g., silicone, chlorine, sulfur gases). 		

^{*1:} Maximum humidity corresponds to an absolute humidity of 33 g/m³ (33.6 °C, 90 %RH) or less.

<Storage conditions (Sensor-fitted SD-3)>

Model	Storage limit (years)		Temperature (°C)		Humidity*1 (% RH)		sure Pa)	Remarks
	_	Minimum	Maximum	Minimum	Maximum	Minimum	Maximum	
SGF	0.5	-10	40	0	90	80	120	Store in a location away from direct sunlight. Store in an environment free of
SHF	0.5	-10	40	0	90	80	120	corrosive gas, vibration, and dust. • Avoid condensation and moisture. • Store in an environment free of
NCF	0.5	-10	40	0	90	80	120	gases that may act as a catalyst poison (e.g., silicone, chlorine, sulfur gases).
IRF	0.5	-10	40	0	90	80	120	 Store in a location away from direct sunlight. Store in an environment free of corrosive gas, vibration, and dust. Avoid condensation and moisture.
ESF-A*2	0.5	-10	40	20	90	80	120	 Store in a location away from direct sunlight. Store in an environment free of corrosive gas, vibration, and dust. Avoid condensation and moisture.
ESF-X*3	0.0	.0	10	20		00	120	Store in an environment free of gases that may act as a catalyst poison (e.g., silicone, chlorine, sulfur gases).
ESF-B*4	0.5	-10	40	30	80	80	120	 Store in the dedicated sensor storage container.*5 Open the dedicated container just
ESF-C92	0.5	-10	40	30	00	00	120	before use, remove the sensor, and mount in the detector.

- *1: Maximum humidity corresponds to an absolute humidity of 33 g/m3 (33.6 °C, 90 %RH).
- *2: ESF-A refers to sensor model names starting with "ESF-A".
- *3: ESF-X refers to sensor model names starting with "ESF-X".
- *4: ESF-B refers to sensor model names starting with "ESF-B".
- *5: If not stored in the container, fluid leakage may occur under high humidity conditions of 90 %RH or more. Fluid shortage may occur with the ESF-B under low humidity conditions.



• This product is very heavy and features various projections. Damage to this product and accompanying parts may result if they are packaged in general packaging materials. When storing or returning the product to RIKEN KEIKI for any reason, use the packaging in which the product was shipped. If the original packaging is no longer available, wrap twice and place hard objects in the spaces within the packaging to ensure that the product will not shift inside the packaging. Avoid packaging fragile items.

6-2 Procedures for relocation or reuse

Before relocating and resuming use of the product, refer to '4-1 Installation precautions' for information on relocation locations.

For information on installation procedures, refer to '4. Installation'.



Calibration must always be performed before resuming use of the product that has been relocated or
previously stopped and stored. Contact RIKEN KEIKI for information on readjustment procedures,
including calibration.

6-3 Product disposal

- Dispose of the product as industrial waste (incombustible) in accordance with local regulations.
- Used sensor units must be returned to RIKEN KEIKI. Submit returns to RIKEN KEIKI.
- Avoid direct contact with any fluid that may leak from electrochemical type sensors (ESF sensors). Place the
 unit in a plastic bag and make sure the fluid cannot leak out.
- The product and ESF sensor contain button-type batteries. These batteries must be properly separated before disposal. Contact your nearest sales office for advice.

<SD-3 main unit>

Button-type lithium battery specifications

Item name	Lithium battery
Nominal voltage	3.0 V
Nominal capacity	48 mAh

Removal method


Remove the main PCB unit indicated by the red box in the figure to the right. Remove the PCB holder.


The battery is located on the underside of the main PCB (on the rear of the 7-segment LCD).

The battery is covered by a plastic case. The plastic case is attached to the PCB. Remove the case using pliers or a flathead screwdriver.

Cut the terminals on both sides of the battery using nippers, then remove

Wrap the removed battery in tape to prevent short-circuiting before disposal.

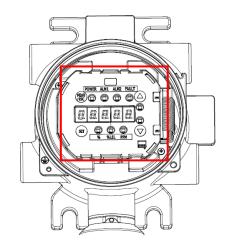

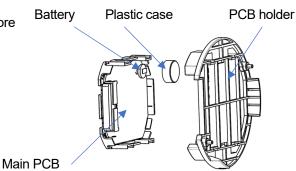

<ESF Sensor>

Button-type lithium battery specifications


Item name	Lithium manganese dioxide battery
Nominal voltage:	3.0 V
Nominal capacity	140 mAh


Removal method

Remove the ESF sensor rear cover (white cover).

Remove the battery from the rear cover.

Wrap the removed battery in tape to prevent short-circuiting before disposal.

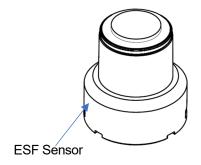

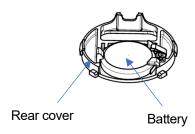



WARNING

Never attempt to disassemble ESF sensors. They contain electrolyte. Blistering may result if the
electrolyte comes into contact with the skin. Contact with eyes may result in blindness. Discoloration or
holes may result if contact with clothing occurs. If contact with electrolyte occurs, rinse the area
immediately with plenty of water.

NOTE

- ▶ The product contains a battery.
- Crossed-out recycle dustbin mark

This pictogram is affixed to products containing batteries to which EU Battery Directive 2006/66/EC applies.

Such batteries must be disposed of appropriately.

This pictogram means batteries must be separated from ordinary waste and disposed of appropriately.



7

Troubleshooting

This troubleshooting section does not address causes of all problems that may occur with the product. It provides brief explanations to assist in determining the causes of common problems.

If you encounter symptoms not addressed here or if problems persist even after taking corrective action, contact RIKEN KEIKI.

7-1 Product abnormalities

Symptom/display	FAULT lamp	Cause	Action			
The power cannot be turned on.		The wires are incorrectly connected.	Wire correctly.			
		The wires are detached from the terminal plate.	Connect correctly.			
		Abnormalities or instantaneous interruptions in the power supply circuit	Check to confirm that the rated voltage is supplied. Consider use of an uninterruptible power system, power supply line filter, or insulated transformer, and add such devices where appropriate.			
		Cable abnormality (Disconnection, cable not connected, short circuit)	Check the wiring for the product and peripheral devices.			
		Fuse blown	Replacement required. Contact RIKEN KEIKI.			
		Internal circuit abnormality	Replacement required. Contact RIKEN KEIKI.			
Abnormal operation	_	Disturbances due to sudden noise, etc.	Turn off the power and restart. If similar symptoms recur frequently, take appropriate measures to address the noise source. If the problem persists even with noise prevention measures, contact RIKEN KEIKI.			
Sensor abnormality (E-1)	(lit)	The sensor is not connected or connected improperly.	Turn off the power and check the sensor connection.			
		A sensor fault has occurred.	Replace with a new sensor.			
		Effects of sudden surge noise	Turn off the power and restart. If similar symptoms recur frequently, take appropriate measures to address the noise source. If the problem persists even with noise prevention measures, contact RIKEN KEIKI.			
		The main unit (SD-3/SD-3SC) or remote sensor head (GD-3) internal wiring is connected incorrectly.	Connect internal wiring of the main unit (SD-3/SD-3SC) or remote sensor head (GD-3) correctly.			

Symptom/display	FAULT lamp	Cause	Action		
		Cable abnormality between the main unit (SD-3SC) and remote sensor head (GD-3)	Check the cable between the main unit (SD-3SC) and remote sensor head (GD-3).		
Sensor abnormality (E-1)		A main unit (SD-3/ SD-3SC) or remote sensor head (GD-3) fuse has blown.	Replacement required. Contact RIKEN KEIKI.		
	(lit)	Main unit (SD-3/SD-3SC) or remote sensor head (GD-3) internal circuit abnormality	Replacement required. Contact RIKEN KEIKI.		
System abnormality		4 - 20 mA output disconnection	Turn off the power and check the 4 - 20 mA output connection.		
(E-9)	(lit)	Internal ROM, RAM, or EEPROM fault	Turn off the power and restart. If the problem persists, replacement is necessary. Contact RIKEN KEIKI.		
GD-3 abnormality (E-1A)		The sensor is not connected or connected improperly.	Turn off the power and check the sensor connection.		
		A sensor fault has occurred.	Replace with a new sensor.		
	(lit)	Effects of sudden surge noise	Turn off the power and restart. If similar symptoms recur frequently, take appropriate measures to address the noise source. If the problem persists even with noise prevention measures, contact RIKEN KEIKI.		

7-2 Reading abnormalities

Symptom/display	FAULT lamp	Cause	Action		
 The reading rises (or drops) and remains unchanged. A gas alarm is triggered despite the absence of a gas leak or any other abnormalities at the detection area. 		The sensor zero or span has altered (drifted).	Perform zero calibration or span adjustment.		
		Presence of interference gases	Check for the presence of interference gases such as solvents and take appropriate action.		
		Slow leakage	Trace amounts of detection target gas may be leaking. Leaving this unresolved may lead to hazardous conditions. Take the same action as for gas alarms.		
		Environmental fluctuations	Perform zero calibration or span adjustment.		
Response is slow.		Effects of noise	Turn off the power and restart. If similar symptoms recur frequently, take appropriate measures to address the noise source. If the problem persists even with noise prevention measures, contact RIKEN KEIKI.		

Symptom/display	FAULT lamp	Cause	Action			
		Sudden environmental changes	Alarm indications may be issued by the product due to sudden environmental fluctuations (e.g., temperature). The product cannot be used in locations where sudden environmental changes occur frequently. The user should take appropriate measures.			
		The sensor sensitivity has degraded.	Replace with a new sensor.			
		The calibration gas concentration is inappropriate.	Prepare the correct calibration gas.			
		The sensor sensitivity has degraded.	Replace with a new sensor.			
System abnormality (E-9)	-	Clock abnormality	Set the date and time. Correction may not function correctly if the EC sensitivity correction function is enabled. If similar symptoms recur frequently, the internal clock may be defective. Replace with a new internal clock. Contact RIKEN KEIKI.			
Outside operating temperature range (E-27)	_	Ambient temperatures at the location where the product is installed are outside the operating temperature range.	The product operating temperature range varies with the specific detection principle. The product cannot be used outside the operating temperature range. The user should take appropriate measures.			
Sensor life expiration warning (E-8)		The sensor is approaching the end of its service life.	We recommend sensor replacement. Contact RIKEN KEIKI.			
Sensor warning (E-1)	_		Contact RIKEN KEIKI.			
RS-485 abnormality (E-6)	_	Communication cable not connected or poor connection	Check that the communication cable wiring and communication settings are correct. Check the setting of the termination resistor. Turn ON the terminating resistor only for the farthest one.			

8

Product Specifications

8-1 Detection target gases for individual detection principles

8-1-1 Non-dispersive infrared absorption type (Infrared type)

Sensor model	Gas name	Gas symbol	F.S.	1 digit	First Alarm setpoint	Second Alarm setpoint	Calibration gas (alternative gas)	Operating temperature range (no sudden changes)	Operating humidity range (no condensation)	Years of warranty
IRF-1301*	Methane	CH ₄	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	CH₄		95 %RH or less (no condensation)	3 years
IRF-1303*	Isobutane	i-C ₄ H ₁₀	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	i-C ₄ H ₁₀			
IRF-1317*	Propane	C₃H ₈	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	C ₃ H ₈ (i-C ₄ H ₁₀)	-40 - 70 °C		
IRF-1435	Carbon dioxide	CO ₂	2,000 ppm	1 ppm	1,000 ppm	-	CO ₂			
IRF-1436	Carbon dioxide	CO ₂	5,000 ppm	10 ppm	1,000 ppm	-	CO ₂			
IRF-1433	Carbon dioxide	CO ₂	10,000 ppm	10 ppm	1,000 ppm	-	CO ₂			
IRF-1437	Carbon dioxide	CO ₂	2 vol%	0.005 vol%	1 vol%	-	CO ₂			
IRF-1438	Carbon dioxide	CO ₂	5 vol%	0.010 vol%	1 vol%	1	CO ₂			
IRF-1439	Carbon dioxide	CO ₂	10 vol%	0.01 vol%	1 vol%	1	CO ₂			
IRF-1334*	Methane	CH ₄	100 vol%	0.5 vol%	25 vol%	50 vol%	CH₄			
IRF-1316*	Ethylene	C ₂ H ₄	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	C ₂ H ₄ (CH ₄)	-		
IRF-1340*	Isobutylene	i-C ₄ H ₈	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	i-C ₄ H ₈ (i-C ₄ H ₁₀)			
IRF-1308*	N-hexane	n-C ₆ H ₁₄	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	n-C ₆ H ₁₄ (i-C ₄ H ₁₀)			
IRF-1332*	Butadiene	C ₄ H ₆	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	C ₄ H ₆ (CH ₄)			
IRF-1315	Propane	C ₃ H ₈	100 vol%	0.5 vol%	25 vol%	50 vol%	C₃H ₈			

^{*}Interference occurs due to other hydrocarbon gases.

NOTE

- ▶ Install in a location with stable conditions within the specified operating temperature range and free of sudden fluctuations.
- ▶ When calibrating, allow the product to warm up for at least 10 minutes before performing zero calibration and span adjustment.

- ▶ Use the IRF sensor adapter when calibrating. Calibration accuracy may be impaired without the IRF sensor adapter.
- ▶ Make sure temperature, humidity, and pressure conditions in the calibration environment are the same as for the measurement environment. (The reading may fluctuate due to temperature, humidity, and pressure characteristics and in some cases may exceed the zero suppression value due to sensor characteristics.)
- ► For ethylene or butadiene to which the product has low gas sensitivity, set the alarm set point to 25 %LEL or higher.
- ▶ Due to infrared absorption characteristics, readings may differ even for the same target gas concentration if the base gas composition differs significantly between calibration and measurement—for example, if an air base is used for calibration and a CO₂ base is used for measurement.
- ▶ Perform maintenance if a warning appears while the self-diagnostic function is active.
- ▶ Regardless of the detection target gas, the warranty period for IRF sensors is 3 years.
- ▶ For other gas types and detection ranges, please contact RIKEN KEIKI.

8-1-2 New ceramic type (catalytic type)

Sensor model	Gas name	Gas symbol	F.S.	1 digit	First Alarm setpoint	Second Alarm setpoint	Calibration gas	Operating temperature range (no sudden changes)	, ,	warranty		
NCF-6318	Methane	CH₄	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	CH ₄ *2		0 %RH -			
NCF-6319	VCM	VCM	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	i-C ₄ H ₁₀	−40 - 70 °C	−40 - 70 °C		-40 - 70 °C 95 %RH*1 (no	3 years
NCF-6320	Hydrogen	H ₂	100 %LEL	0.5 %LEL	25 %LEL	50 %LEL	H ₂ * ³		condensation)			

^{*1:} Absolute humidity not exceeding 46 g/m³ (equivalent to 37 °C, 95 %RH)

- ▶ Install in a location with stable conditions within the specified operating temperature range and free of sudden fluctuations.
- ▶ The sensor characteristics may deteriorate significantly if silicone gases (organic silicone gases), halogen gases, sulfide gases, or acid gases are present.
- A silicone removal filter and activated carbon filter are available as options.
- ▶ For models with a F.S. of 5,000 ppm or less, allow the product to warm up for at least 120 minutes in clean air before performing zero calibration and span adjustment.
- ▶ For models with a F.S. of 5,000 ppm or less, the effects of ambient humidity and temperature fluctuations will become more significant, and the zero point may drift. If this occurs, enable the zero follower function. However, we recommend using a sensor with a different detection principle where gas is constantly present. The zero follower function cannot be used under such conditions.
- ▶ The reading may change even for combustible gases other than the detection target gas.
- Readings may fall as oxygen concentrations decrease.
- ▶ Interference may occur if gases with high thermal conductivity, such as high-concentration CO₂, Ar, or He, are present as the base gas.
- ▶ In detecting gases with low vapor pressure by the suction method, the gas may form a mist when drawn in from the high-temperature side and detected at the low-temperature side, possibly forming condensation inside the sensor or causing clogging due to sintering. Keep vapor pressure in mind during use
- ▶ Perform maintenance if a warning appears while the self-diagnostic function is active.
- ▶ Use the combustible gas sensor adapter when calibrating. Calibration accuracy may be reduced without the combustible gas sensor adapter.
- ▶ Reading accuracy may be reduced if temperature fluctuations exceed ±40 °C with respect to ambient temperature following zero calibration or span calibration. If this occurs, repeat zero calibration or span adjustment.
- ▶ Readings may fluctuate if the product is subjected to strong external impact or vibration. If this occurs, perform zero calibration and span adjustment.
- ▶ The zero point may fluctuate if the sensor comes into contact with high-concentration gas of 100 %LEL or more continuously for extended periods. If this occurs, perform zero calibration and span adjustment.
- ▶ The sensor may be hot during replacement. Be careful to avoid burns when replacing the sensor. If the sensor is hot, turn off the power and wait for it to cool.
- ▶ Regardless of the detection target gas, the warranty period for NCF sensors is 3 years.
- ▶ For other gas types and detection ranges, please contact RIKEN KEIKI.

^{*2:} Use the NCF-6318 if methane calibration is required or when the detection target gas is methane, propane, or ethane. The detection target gas overlaps for the NCF-6318 and NCF-6319. Use the NCF-6319 in cases other than the above.

^{*3:} Use the NCF-6320 if hydrogen selectivity is required.

8-1-3 Semiconductor type

Sensor model	Gas name	Gas symbol	F.S.	1 digit	First alarm setpoint	Second alarm setpoint	Calibration gas	Operating temperature range (no sudden changes)	Operating humidity range (no condensation)	Warranty period
SGF-8562	Carbon disulfide	CS ₂	200 ppm	1 ppm	50 ppm	100 ppm	CS ₂		20 %RH -	
SGF-8563	Ethylene oxide	EO	100 ppm	1 ppm	25 ppm	50 ppm	EO	-20 - 65 °C	95 %RH*	3 years
SGF-8562	Hydrogen sulfide	H₂S	100 ppm	1 ppm	25 ppm	50 ppm	H₂S		(no condensation)	

^{*}Absolute humidity not exceeding 46 g/m³ (equivalent to 37 °C, 95 %RH)

- ▶ The sensor characteristics may deteriorate significantly if silicone gases (organic silicone gases), halogen gases, sulfide gases, or acid gases are present.
- A silicone removal filter and activated carbon filter are available as options.
- ▶ Prepare the calibration gas to suit the humidity of the environment in which it will be used.
- ▶ When calibrating, allow the product to warm up for a period of time corresponding to the length of time turned off in clean air before performing zero calibration and span adjustment. For information on appropriate warmup times, refer to the <Semiconductor type sensor warmup times> table below.
- ▶ The reading may change even for combustible gases other than the detection target gas.
- ▶ The reading may change even for ambient fluctuations (e.g., temperature and humidity) in the installation location.
- ▶ The reading may fall as the oxygen concentration decreases.
- ▶ Interference may occur if gases with high thermal conductivity, such as high-concentration CO₂, Ar, or He, are present as the base gas.
- ▶ In detecting gases with low vapor pressure by the suction method, the gas may form a mist when drawn in from the high-temperature side and detected at the low-temperature side, possibly forming condensation inside the sensor or causing clogging due to sintering. Keep vapor pressure in mind during use.
- ▶ Perform maintenance if a warning appears while the-self-diagnostic function is active.
- ▶ Use the combustible gas sensor adapter when calibrating. Calibration accuracy may be reduced without the combustible gas sensor adapter.
- ▶ Reading accuracy may be reduced if temperature fluctuations exceed ±20 °C with respect to ambient temperature following zero calibration or span calibration. If this occurs, repeat zero calibration or span adjustment.
- ▶ Readings may fluctuate if the product is subjected to strong external impact or vibration. If this occurs, perform zero calibration and span adjustment.
- ▶ Contact with high-concentration gas above full scale may cause the zero point and indicated value to fluctuate. In that case, it is recommended to replace the sensor.
- ▶ Readings may fall in environments where gas is continuously present.
- ▶ The sensor may be hot during replacement. Be careful to avoid burns when replacing the sensor. If the sensor is hot, turn off the power and wait for it to cool.
- ▶ The top of the sensor has a Teflon coating. Sensor characteristics may be affected if the Teflon coating is damaged. Take care to avoid pressing on the Teflon coating with excessive force or damaging it with sharp implements.
- ▶ Calibration is not possible if the reading during calibration does not exceed the zero suppression value. If the reading is below the zero suppression value when the desired calibration gas is introduced for calibration, first calibrate using a gas that gives a reading higher than the zero suppression value, then calibrate using the desired calibration gas.
- Regardless of the detection target gas, the warranty period for SGF sensors is 3 years.
- ▶ For other gas types and detection ranges, please contact RIKEN KEIKI.

<Semiconductor type sensor warmup times>

Unpowered period	Warmup time
Within 10 minutes	30 minutes or more
Within 1 hour	2 hours or more
Within 24 hours	4 hours or more
Within 72 hours	24 hours or more
Within 10 days	2 days or more
Less than 1 month	7 days or more
1 month to less than 3 months	14 days or more
3 months or more	1 month or more

8-1-4 Hot-wire semiconductor type

Sensor model	Gas name	Gas symbol	F.S.	1 digit	First alarm setpoint	Second alarm setpoint	Calibration gas	Operating temperature range (no sudden changes)	Operating humidity range (no condensation)	Warranty period
SHF-8601	Methane	CH₄	5,000 ppm	25 ppm	2,000 ppm	4,000 ppm	CH₄	-30 - 70 °C		
SHF-8601	Carbon monoxide	со	1,000 ppm	10 ppm	250 ppm	500 ppm	СО	0 - 70 °C	20 %RH - 95 %RH*	3 years
SHF-8603	Hydrogen	H ₂	2,000 ppm	10 ppm	500 ppm	1,000 ppm	H ₂	-30 - 70 °C	(no condensation)	

^{*}Absolute humidity not exceeding 46 g/m³ (equivalent to 37 °C, 95 %RH)

- ▶ The sensor characteristics may deteriorate significantly if silicone gases (organic silicone gases), halogen gases, sulfide gases, or acid gases are present.
- A silicone removal filter and activated carbon filter are available as options.
- Prepare the calibration gas to suit the humidity of the environment in which it will be used.
- ▶ When calibrating, allow the product to warm up for a period of time corresponding to the length of time turned off in clean air before performing zero calibration and span adjustment. For information on appropriate warmup times, refer to the <Hot-wire semiconductor type sensor warmup times> table below.
- ▶ The reading may change even for combustible gases other than the detection target gas.
- ▶ The reading may change even for ambient fluctuations (e.g., temperature and humidity) in the installation location.
- The reading may fall as the oxygen concentration decreases.
- ▶ Interference may occur if gases with high thermal conductivity, such as high-concentration CO₂, Ar, or He, are present as the base gas.
- ▶ In detecting gases with low vapor pressure by the suction method, the gas may form a mist when drawn in from the high-temperature side and detected at the low-temperature side, possibly forming condensation inside the sensor or causing clogging due to sintering. Keep vapor pressure in mind during use.
- ▶ Perform maintenance if a warning appears while the-self-diagnostic function is active.
- ▶ Use the combustible gas sensor adapter when calibrating. Calibration accuracy may be reduced without the combustible gas sensor adapter.
- ▶ Reading accuracy may be reduced if temperature fluctuations exceed ±20 °C with respect to ambient temperature following zero calibration or span calibration. If this occurs, repeat zero calibration or span adjustment.
- ▶ Readings may fluctuate if the product is subjected to strong external impact or vibration. If this occurs, perform zero calibration and span adjustment.
- ▶ Contact with high-concentration gas above full scale may cause the zero point and indicated value to fluctuate. In that case, it is recommended to replace the sensor.
- ▶ Readings may fall in environments where gas is continuously present.
- ▶ The calibration value may become offset if gas is detected at levels exceeding the F.S. value. Enabling the sensor protection function will help reduce these effects if there is any possibility of exposure to gas at levels exceeding the F.S. value. However, if the sensor protection function is enabled, detection is not possible after the F.S. value has been exceeded until it is reset, as the power to the sensor is cut off. Reset from the sensor protection state in an environment with clean air.
 - If the sensor protection state has been used for extended periods (one day or longer), warm up for a period of time corresponding to the sensor protection period. (Enabling the sensor protection function also enables the over locking function.)
- ▶ The sensor may be hot during replacement. Be careful to avoid burns when replacing the sensor. If the sensor is hot, turn off the power and wait for it to cool.
- ▶ Depending on the conditions and length of time for which the power was turned off, the reading may change when the power is turned on, even after the warmup time (three minutes) has elapsed. If this occurs, wait until the reading returns to zero.
- ▶ Regardless of the detection target gas, the warranty period for SHF sensors is 3 years.
- ▶ For other gas types and detection ranges, please contact RIKEN KEIKI.

<Hot-wire semiconductor type sensor warmup times>

Time turned off	Warmu	ıp time
Time turned on	SHF-8603	Other SHF sensors
Under 10 minutes	At least 10 minutes	At least 1 hour
Under 1 hour	At least 30 minutes	At least 2 hours
Under 24 hours	At least 1 hour	At least 4 hours
Under 72 hours	At least 4 hours	At least 24 hours
Under 10 days	At least 2 days	At least 2 days
Under 1 month	At least 7 days	At least 7 days
Under 3 months	At least 14 days	At least 14 days
3 months or more	At least 1 month	At least 1 month

 $^{{}^{\}star}\text{Note}$ that warmup times differ between the SHF-8603 and other SHF sensors.

8-1-5 Electrochemical type

Sensor model	Gas name	Gas symbol	F.S.	1 digit	First Alarm setpoint	Second Alarm setpoint	Calibration gas	Operating temperature range (no sudden changes)	Operating humidity range (no condensation)	Years of warranty
ESF-A24A	Nitrogen dioxide	NO ₂	15 ppm	0.1 ppm	5.0 ppm	10.0 ppm	NO ₂	−40 - 70 °C*²	20 %RH - 90 %RH (no condensation)	3 years
ESF-A24P	Carbon monoxide	со	150 ppm	1 ppm	50 ppm	100 ppm	СО	-40 - 70 °C*2	20 %RH - 90 %RH (no condensation)	3 years
ESF-A24R	Hydrogen sulfide	H ₂ S	100 ppm	0.5 ppm	20 ppm	40 ppm	H ₂ S	−40 - 70 °C*²	95 %RH or less (no condensation)	3 years
ESF-A24R3	Hydrogen sulfide	H ₂ S	100 ppm	0.5 ppm	20 ppm	40 ppm	H₂S	−40 - 70 °C*²	95 %RH or less (no condensation)	3 years
ESF-A24RH*1	Hydrogen sulfide	H₂S	30 ppm	0.2 ppm	10 ppm	20 ppm	H₂S	−40 - 70 °C*²	40 %RH - 95 %RH (no condensation)	3 years
ESF-B22	Ammonia	NH₃	75 ppm	0.5 ppm	25 ppm	50 ppm	NH₃	−40 - 70 °C*2*4	30 %RH - 80 %RH (no condensation)	3 years*2
ESF-X24P2	Oxygen	O ₂	25 %	0.1 %	18.0 %	18.0 %	O ₂	−40 - 70 °C*2*3	20 %RH - 90 %RH (no condensation)	3 years
ESF-C92	Chlorine	CL ₂	1.5 ppm	0.01 ppm	0.5 ppm	1.0 ppm	CL ₂	−20 - 70 °C*³	30 %RH - 80 %RH (no condensation)	3 years

^{*1:} Sensor for high humidity environment.

- ▶ Perform maintenance if a warning appears while the self-diagnostic function is active.
- ▶ Use the ESF sensor adapter when calibrating. Calibration accuracy may be reduced without the ESF sensor adapter.
- ▶ Use a flow rate of 0.5 ± 0.1 L/min when calibrating. Calibration accuracy may be reduced if calibration is performed using a different flow rate.
- ▶ When using a diffusion type detector, gas sensitivity will be affected by ambient wind speeds.
- ▶ The number of years of warranty for the ESF sensor depends on the sensor model. Refer to the above table.
- Before using the sensor, store it in the dedicated container for the sensor.
- For other gas types and detection ranges, please contact RIKEN KEIKI.

^{*2:} Allow the product to fully adjust to the usage conditions before adjusting if below -25 °C.

^{*3:} Allow the product to fully adjust to the usage conditions before adjusting if above 55 °C. Can be used for a total of one week between 55 °C and 70 °C.

^{*4:} At -25°C or below, the response time may be slow.

^{*5} In order to ensure the accuracy of indication in an environment where the temperature difference exceeds 60°C, it is necessary to readjust it to adapt to the environmental temperature.

Product warranty

- 1. If a fault occurs with the product within three years of the purchase date, with use under normal conditions in compliance with precautions indicated in the operating instructions or on labels affixed to the main unit, repairs will be cost free.
- 2. Contact our sales department or your nearest sales office for information on repairs, maintenance, or after-sales service.
- 3. You will be charged for costs incurred as the result of service rendered in remote locations.
- 4. Fees will be charged for repairs in the following cases, even during the warranty period:
 - (a) Fault or damage is attributable to incorrect use or improper repairs or modifications.
 - (b) Fault or damage following repairs or modifications made at locations other than RIKEN KEIKI or a service agent specified by RIKEN KEIKI.
 - (c) Fault or damage is attributable to moving, transporting, falling, dropping, or improper storage occurring after purchase.
 - (d) Fault or damage is attributable to external factors, including natural phenomena such as fire, earthquake, flood, or lightning; pollution; abnormal voltage; use of power sources outside of rated ranges (voltage, frequency), etc.
 - (e) The fault is attributable to a factor external to this product.
 - (f) When replacing consumables (batteries, fuses, etc.).

date or the date on which a sensor was replaced for a fee.

Sensor warranty

- 1. Replacements will be provided at no charge if a fault occurs within three years of the purchase date or the date on which a sensor was replaced for a fee (excluding certain sensors), with use under normal conditions in compliance with precautions indicated in the operating instructions or on labels affixed to the main unit. For information on the length of the warranty for each sensor model, refer to '10- 3 Detection target gases for individual detection principles'.
 A precondition of the warranty for sensors requires sensors to be serviced once or more a year from the purchase
- 2. Contact our sales department or your nearest sales office for information about repairs, maintenance, or aftersales service.
- 3. You will be charged for costs incurred as the result of replacements performed in remote locations.
- 4. Fees will be charged for replacements made in the following cases, even during the warranty period.
 - (a) If the product is used in disregard of the precautions provided in the operating instructions, on labels affixed to the main unit, or elsewhere.
 - (b) Fault or damage following repairs or modifications made at locations other than RIKEN KEIKI or a service agent specified by RIKEN KEIKI.
 - (c) Fault or damage is attributable to moving, transporting, falling, dropping, or improper storage occurring after purchase.
 - (d) Fault or damage is attributable to external factors, including natural phenomena such as fire, earthquake, flood, or lightning; pollution; abnormal voltage; use of power sources outside of rated ranges (voltage, frequency), etc.
 - (e) The fault is attributable to a factor external to this product.
 - (f) Changes in the gas sensitivity of the sensor, fault, or damage are due to the effects of coexisting gases (acidic gases, alkaline gases, alcohol, silicone, etc.) in the installation environment.

Revision History

Issue	Revision details	Issue date
0	First issue (PT2E-3013)	7/14/2023
1	Delete UKEX/UKCA, change CE declaration of conformity 1-2-1 Modification of models and codes 2-4 Safety information 3-1-5 Addition and correction of special accessories (optional) 3-3 Addition block diagrams 4-12 RS-485 setting (optional) 5-6 Correction performing zero calibration 5-7-2 Addition check RS-485 setting value 7-2 Addition reading abnormalities	9/12/2024
2	1-2-1 Addition Taiwan Ex 1-5 Addition Taiwan Ex	1/20/2025



Document No. 320CE24062



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3ECB, SD-3DECB, GD-3ECB

Council Directives	Applicable Standards
EMC Directive (2014/30/EU)	EN 50270:2015
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019
	EN IEC 60079-0:2018
ATEX Directive (2014/34/EU)	EN 60079-1:2014
	EN 60079-11:2012
BATTERY Regulation ((EU)2023/1542)	-
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018

^[11]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:

 $\langle \varepsilon_x \rangle$

II 2 G Ex db ia IIC T4 Gb

Alternative Marking: Applicable models without surge protection device or HART

adapter

-40°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

-40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024

7. Feekelhota



Document No. 320CE24067



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3RI, SD-3DRI, GD-3RI

Council Directives	Applicable Standards		
EMC Directive (2014/30/EU)	EN 50270:2015		
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019		
ATEX Directive (2014/34/EU)	EN IEC 60079-0:2018 EN 60079-1:2014		
BATTERY Regulation ((EU)2023/1542)	-		
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018		

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:



II 2 G Ex db IIC T6...T5 Gb

Alternative Marking:

Applicable models without surge protection device or HART

adapter

•T6: -50°C ≤ Ta ≤ +60°C •T5: -50°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

•T6: -40°C ≤ Ta ≤ +60°C •T5: -40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024

7. Lukelhora



Document No. 320CE24068



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3GH, SD-3DGH, GD-3GH

Council Directives	Applicable Standards		
EMC Directive (2014/30/EU)	EN 50270:2015		
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019		
ATEX Directive (2014/34/EU)	EN IEC 60079-0:2018 EN 60079-1:2014		
BATTERY Regulation ((EU)2023/1542)	-		
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018		

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:



II 2 G Ex db IIC T5...T4 Gb

Alternative Marking:

Applicable models without surge protection device or HART adapter

• T5: -50°C ≤ Ta ≤ +44°C • T4: -50°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

• T5: -40°C ≤ Ta ≤ +44°C • T4: -40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024

7. Fulkelhoro



Document No. 320CE24069



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3GHS, SD-3DGHS, GD-3GHS

Council Directives	Applicable Standards		
EMC Directive (2014/30/EU)	EN 50270:2015		
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019		
ATEX Directive (2014/34/EU)	EN IEC 60079-0:2018 EN 60079-1:2014		
BATTERY Regulation ((EU)2023/1542)	-		
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018		

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:



II 2 G Ex db IIC T6...T4 Gb

Alternative Marking:

Applicable models without surge protection device or HART adapter

T6: -50°C ≤ Ta ≤ +47°C
 T4: -50°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

• T6: -40°C ≤ Ta ≤ +47°C

• T4: -40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024

7. Fulrelhota



Document No. 320CE24070



RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

> Product Name Gas Detector with Signal Converter Model SD-3NC, SD-3DNC, GD-3NC

Council Directives	Applicable Standards		
EMC Directive (2014/30/EU)	EN 50270:2015		
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019		
ATEX Directive (2014/34/EU)	EN IEC 60079-0:2018 EN 60079-1:2014		
BATTERY Regulation ((EU)2023/1542)	-		
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018		

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. **DEKRA 24ATEX0017X**

DEKRA Certification B.V. (NB 0344) Notified Body for ATEX

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:



II 2 G Ex db IIC T5...T4 Gb

Alternative Marking:

Applicable models without surge protection device or HART adapter

• T5: -50°C ≤ Ta ≤ +44°C

• T4: -50°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

7. Lulalhoro

• T5: -40°C ≤ Ta ≤ +44°C

• T4: -40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024 Takakura Toshiyuki

General manager

Quality Control Center



Document No. 320CE24071



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3SP, SD-3DSP, GD-3SP

Council Directives	Applicable Standards
EMC Directive (2014/30/EU)	EN 50270:2015
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019
ATEX Directive (2014/34/EU)	EN IEC 60079-0:2018 EN 60079-1:2014
BATTERY Regulation ((EU)2023/1542)	-
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:



II 2 G Ex db IIC T5...T4 Gb

Alternative Marking:

Applicable models without surge protection device or HART adapter'

T5: -50°C ≤ Ta ≤ +55°C
 T4: -50°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

T5: -40°C ≤ Ta ≤ +55°C
 T4: -40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024

7. Lukelhora



Document No. 320CE24072



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3EC, SD-3DEC, GD-3EC

Council Directives	Applicable Standards
EMC Directive (2014/30/EU)	EN 50270:2015
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019
$1\Delta I = X I I I I CON (2011/1/37/1-11)$	EN IEC 60079-0:2018 EN 60079-1:2014
BATTERY Regulation ((EU)2023/1542)	-
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:

 $\langle \epsilon_x \rangle$

II 2 G Ex db IIC T4 Gb

Alternative Marking: Applicable models without surge protection device or HART

adapter

-50°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

-40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024

7. Fullelhora



Document No. 320CE24073



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3ECS, SD-3DECS, GD-3ECS

Council Directives	Applicable Standards
EMC Directive (2014/30/EU)	EN 50270:2015
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019
ATEX Directive (2014/34/EU)	EN IEC 60079-0:2018 EN 60079-1:2014
BATTERY Regulation ((EU)2023/1542)	-
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:

 $\langle \epsilon_x \rangle$

II 2 G Ex db IIC T4 Gb

Alternative Marking: Applicable models without surge protection device or HART

adapter

-50°C ≤ Ta ≤ +70°C

Applicable models with surge protection device or HART adapter

7. Falkelhoro

-40°C ≤ Ta ≤ +70°C

Place: Tokyo, Japan

Date: Jun. 24, 2024

Takakura Toshiyuki General manager

Quality Control Center

ϵ

EU-Declaration of Conformity

Document No. 320CE24074



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Gas Detector with Signal Converter Model SD-3SC

Council Directives	Applicable Standards
EMC Directive (2014/30/EU)	EN 50270:2015
LV Directive (2014/35/EU)	EN 61010-1:2010+A1:2019
ATEX Directive (2014/34/EU)	EN IEC 60079-0:2018 EN 60079-1:2014
BATTERY Regulation ((EU)2023/1542)	-
RoHS Directive (2011/65/EU[1])	EN IEC 63000:2018

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

EU-Type examination Certificate No. DEKRA 24ATEX0017X

Notified Body for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

Auditing Organization for ATEX DEKRA Certification B.V. (NB 0344)

Meander 1051, 6825 MJ Arnhem P.O. Box 5185, 6802 ED Arnhem

The Netherlands

The marking of the product shall include the following:



(a) II 2 G Ex db IIC T6...T4 Gb (When combined with:GD-3GHS, GD-3SP, GD-3NP, GD-3EC, GD-3ECS)

(b) II 2 G Ex db IIC T5...T4 Gb (When combined with:GD-3GH, GD-3NC)

(c) II 2 G Ex db IIC T6...T5 Gb (When combined with:GD-3RI) (d) II 2 G Ex db IIC T4 Gb (When combined with:GD-3ECB) (e) II 2 G Ex db IIC T4 Gb (When combined with:GD-3RIP)

Alternative Marking:

Applicable models without surge protection device or HART adapter'

(a) •T6: -50 °C ≤ Ta ≤ +47 °C

(b) •T5: -50 °C ≤ Ta ≤ +44 °C

•T4: -50 °C ≤ Ta ≤ +70 °C

•T5: -50 °C ≤ Ta ≤ +55 °C •T4: -50 °C ≤ Ta ≤ +70 °C

(c) •T6: -50 °C ≤ Ta ≤ +60 °C

(d) •-40 °C ≤ Ta ≤ +70 °C

•T5: -50 °C ≤ Ta ≤ +70 °C

(e) •-50 °C ≤ Ta ≤ +70 °C

Applicable models with surge protection device or HART adapter

(a) •T6: -40 °C ≤ Ta ≤ +47 °C

(b) •T5: -40 °C ≤ Ta ≤ +44 °C

•T5: -40 °C ≤ Ta ≤ +55 °C

•T4: -40 °C ≤ Ta ≤ +70 °C

-15. -40 C \(\text{Ta} \(\text{\final} \)

•T4: -40 °C ≤ Ta ≤ +70 °C (c) •T6: -40 °C ≤ Ta ≤ +60 °C

(d) •-40 °C ≤ Ta ≤ +70 °C

•T5: -40 °C ≤ Ta ≤ +70 °C

(e) •-40 °C ≤ Ta ≤ +70 °C

Place: Tokyo, Japan

Date: Jun. 24, 2024

Takakura Toshiyuki General manager Quality Control Center

F. Lukelhoro